



CrossRace Pro

User Manual

(Compatible with 2-8 Copters)



SAFETY PRECAUTIONS

- Never operate models during adverse weather conditions. Poor visibility can cause disorientation and loss of control of pilots' model.
- Never use this product in a crowd or illegal areas.
- Always check all servos and their connections prior to each run.
- Always be sure about turning off the receiver before the transmitter.
- To ensure the best radio communication, please enjoy the flight/driving at the space without interference such as high voltage cable, communication base station or launching tower.

WARNING

This product is not a toy and is **NOT** suitable for children under the age of 14. Adults should keep the product out of the reach of children and exercise caution when operating this product in the presence of children.

Water or moisture may enter the transmitter inside through gaps in the antenna or joystick and cause model instability, even out of control. If running in the wet weather (such as game) is inevitable, always use plastic bags or waterproof cloth to cover the transmitter.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Contents

1. CrossRace Pro Introduction	4
1.1 Spare Parts	4
1.2 Connectors	5
1.3 Specifications	7
1.4 Advices	9
2. Mission Planner	9
2.1 Install Mission Planner	9
2.2 Mission Planner Introduction	10
3. Initial Setup	11
3.1 Download and Install Firmware	11
3.2 Frame Type	13
3.3 Accelerometer Calibration	14
3.4 Compass Calibration	17
3.5 Radio Calibration	20
3.6 Flight Modes Setup	23
3.7 Flight Modes Introduction	24
3.7.1 Stabilize Mode	24
3.7.2 Acro Mode (FPV)	24
3.7.3 Altitude Hold Mode	26
3.7.4 Auto Mode	26
3.7.5 PosHold Mode	28
3.7.6 RTL Mode	28
3.7.7 Simple and Super Simple Modes	30
3.7.8 More Flight Modes	32
4. F/S(Fail Safe) Setting	33
4.1 Radio Fail Safe Setup	33
4.2 EKF Fail Safe	36
5. Hardware Setup	36
5.1 Install CrossRace Pro on the Aircraft	36

5.2 Connect CrossRace Pro to the Aircraft	37
5.2.1 Motor Order Rotation Select	37
5.2.2 How to Recognize Clockwise and Counterclockwise Propellers	40
5.2.3 Connect the Spare Parts	41
5.3 LED Indicator, Arming and Troubleshooting	44
5.3.1 LED Indicator	44
5.3.2 Arming and Disarming	44
5.3.3 Turn off Spinning when Armed	46
5.3.4 Troubleshooting for Arm Failure	46
5.4 ESC Calibration	49
5.5 Level Calibration	50
5.6 GeoFence	50
5.7 Onboard OSD	52
5.7.1 Setting Introduction	52
5.7.2 Screen Introduction	53
5.8 Advanced Functions of CrossRace Pro	54
5.8.1 CrossRace Pro Uses ESC Telemetry	54
5.8.2 CrossRace Pro' s Anti-turtle Mode	56
6. AutoTune	56
7. Parameter Setting	58
7.1 Parameter Interface Introduction	58
7.2 Parameter Adjustment	59
7.3 Manual Parameter Adjustment	59
7.4 Optimize the Handling of Acro Mode	59
8. Download DataFlash Log	60

1. CrossRace Pro Introduction


1.1 Spare Parts



Flight Controller
(CrossRace Pro)*1




Buzzer(Need welding)*1

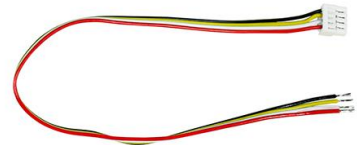

TELEM1&2 Ports
Connect Cable*2



USB Cable
(Update or Setup)*1

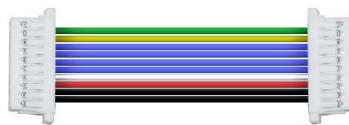

4 in 1 ESC
Connect Cable*1



Receiver Connect Cable*1




Quick Start Guide *1




Packing Box*1

1.2 Connectors


Definition of Each Port of the Soldering Plate:

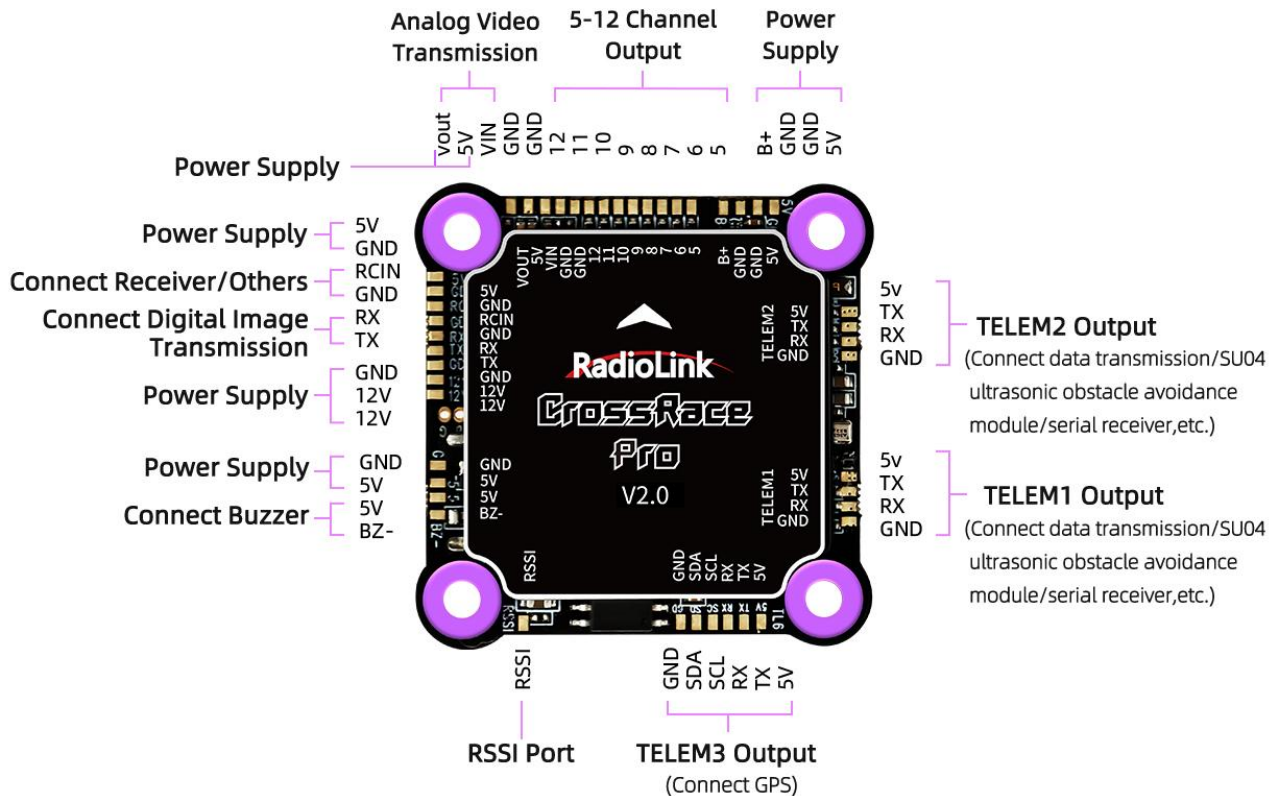

Definition of Each Port of the Socket:

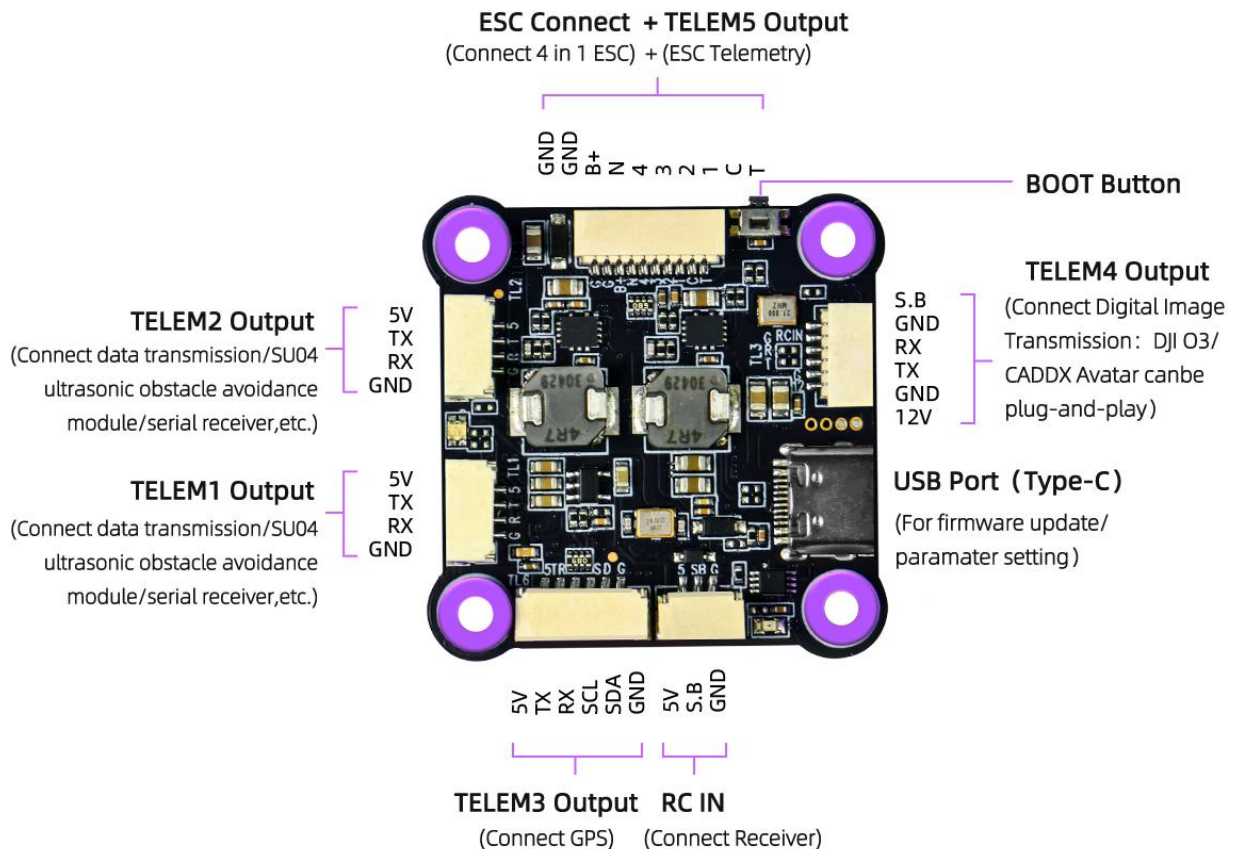

Connection Diagram of CrossRace Pro to Multi-rotor

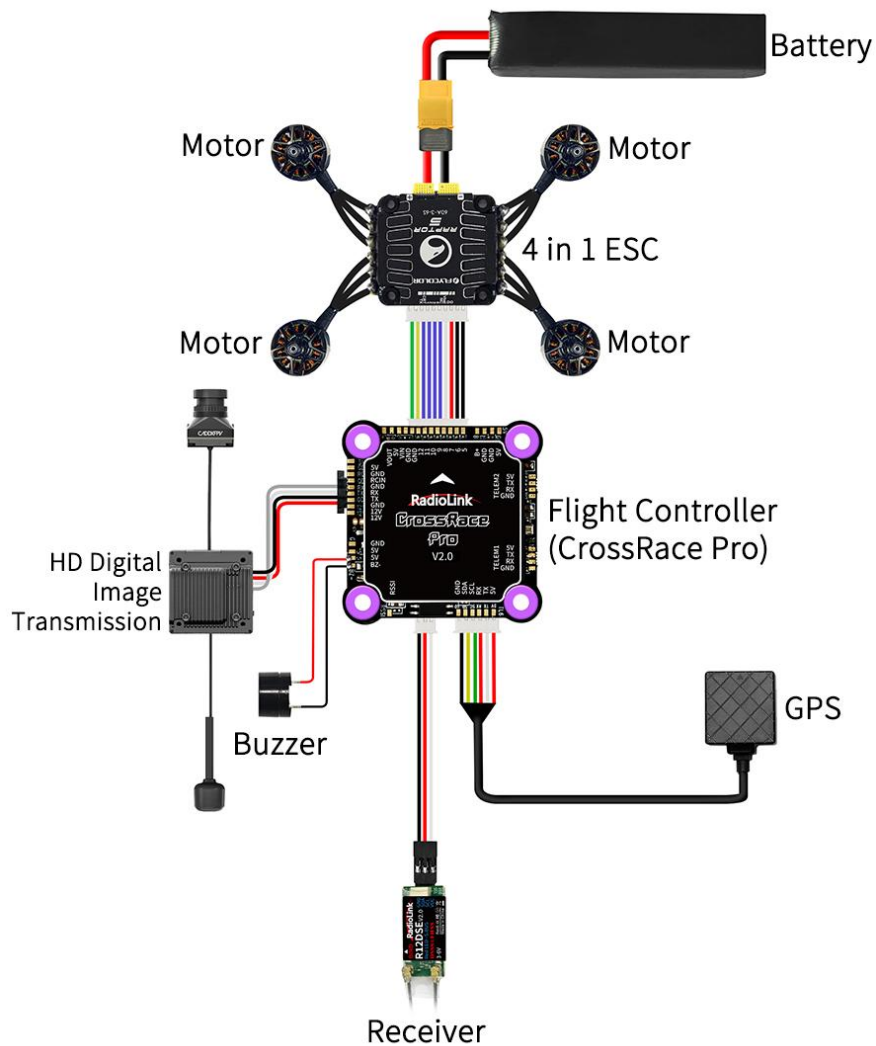

CrossRace Pro serial ports:

CrossRace Pro has a total of five serial ports: TELEM1, TELEM2, TELEM3, TELEM4, and TELEM5.

Among them, serial ports 1 and 2 are custom serial ports. Serial port 3 defaults to the GPS interface. Serial port 4 defaults to the digital image transmission interface, and serial port 5 defaults to the ESC telemetry interface.

Serial Port	Function
TELEM1	Custom serial port
TELEM2	Custom serial port
TELEM3	GPS
TELEM4	Digital image transmission
TELEM5	ESC telemetry

External power supply for CrossRace Pro:


CrossRace Pro supports a total of 3 voltage ranges to power external devices, namely 5V, 12V and B+.

B+: The battery voltage that powers the ESC and flight controller is the voltage output by the B+ pin of the CrossRace Pro flight controller. Therefore, when an external device needs to be powered through the B+ pin of the CrossRace Pro flight controller, please make sure the battery voltage does not exceed the working voltage range of your external device to avoid damaging the external device due to high-voltage input.

5V: Regardless of the voltage of the battery that powers the ESC and flight controller, the 5V pin on the CrossRace Pro flight controller always outputs 5V voltage to external devices.

12V: If the battery voltage that powers the ESC and flight controller is higher than 12V, the 12V pin on the CrossRace Pro flight controller will only output 12V to external devices. If the battery voltage is lower than 12V, the 12V pin will output the actual battery voltage to the external device.

The 12V output of CrossRace Pro is turned on by default. If you want a switch to control the 12V output, you can select a channel, such as channel 8. Search for RC8_OPTION in the Full Parameters List, and change it to relay 2 ON/OFF (34). After writing parameters and restarting the flight controller, you can control the 12V on and off through channel 8.

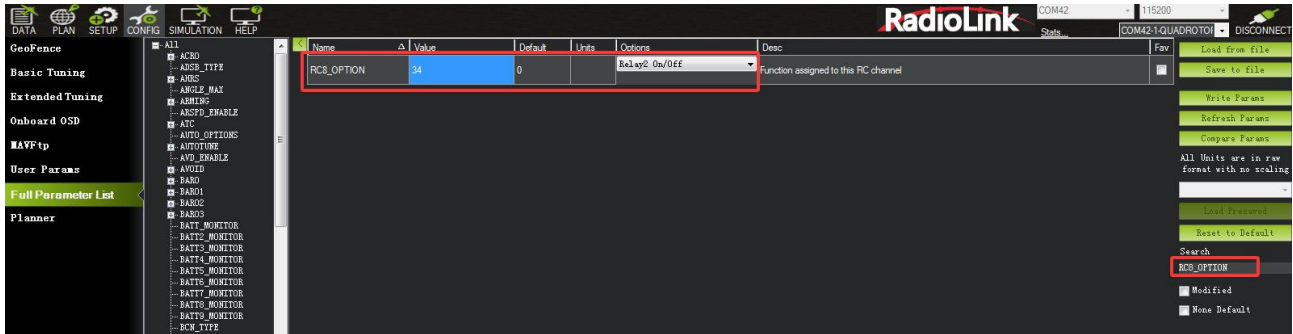

1.3 Specifications

Weight & Dimension	Dimension	37*37mm
	Mounting Hole Distance	30.5*30.5mm
	Weight	12.2g(0.43oz), 42.8g(1.5oz when all wires included)
Hardware	Processor	STM32H743
	Schedule Loop Rate	1000HZ
	Frequency	480MHZ

Sensor	Gyro & Accelerometer	BMI270
	Barometer	SPA06-003
	FRAM	128M, can store 718 waypoints for multi-copters
	Buzzer	1
	Safety Switch	None
Connector	Type	Combining socket interfaces and soldering pads. Support DJI/CADDX HD Digital Video Transmission Plug-and-play
	ESC Connector	10 PIN ESC connector, support voltage and current monitor and ESC telemetry
	BEC	5V&12V Dual BEC Built-in
	Channel Output	12 Channels Output
	Mavlink UART	2 (Without RTS/CTS)
	USB Port	1 (Type-C)
	GPS UART / I2C Port	1
	RC In Signal Input	PPM/SBUS
	RSSI Output	Support
	OSD Module	OSD Module integrated
	ESC Protocol	PWM/DShot/OneShot
	RTK	Support
	Redevelopment	Do not support
	Input Voltage	2-6S
	Input Current	5A
	Relay (12V BEC)	A switch can be set as a 12V BEC switch, used to turn on/off the image transmission power supply by the transmitter directly
Adaptable Models	2-8 Copters	
Operating Parameters	USB Voltage	5V $\pm$ 0.3V
	Operating Temperature	-30~85°

1.4 Advices

For the users who firstly use CrossRace Pro, we suggest that you use CrossRace Pro following below steps:


1. You have to install the mission planner and driver from here and familiar with the menu. To establish a connection, you must first choose the communication method/channel you want to use, and then set up the physical hardware and Windows device drivers. You can connect the PC and autopilot using USB cables, Telemetry Radios, Bluetooth, IP connections etc.
2. Download the update firmware by USB cable if you need.
3. Connect flight controller to Mission Planner, and connect receiver to finish the calibration of transmitter, Accelerometer and compass.
4. Setup RC transmitter flight mode.
5. Assemble aircraft and finish the pre-flight checklist.
6. PID usage.
7. Advanced configuration.

Note: When the aircraft switches from auto-throttle mode (such as AltHold mode, PosHold mode etc.) to manual mode (ACRO), please check whether the throttle stick is in the lowest position when switching flight modes, If the stick is in the middle position, the aircraft will rush upwards, which may cause dangerous consequences such as loss of control, crash, and casualties.

2. Mission Planner

2.1 Install Mission Planner

Net Framework 4.6.2 need to be installed first before Mission Planner; you can [download Net Framework 4.6.2 here](#):

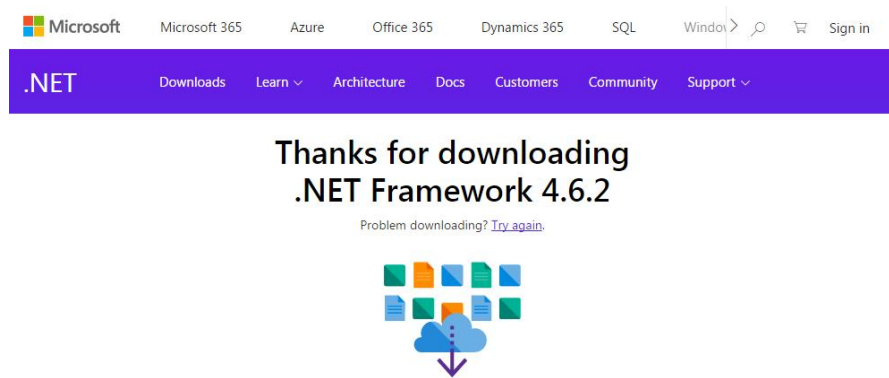

After installing Net Framework 4.6.2, you can download the Mission Planner of CrossRace Pro from the link here: www.radiolink.com.cn/crossracepro_missionplanner

Open the Microsoft installer file and select Run to run the installation utility.



2.2 Mission Planner Introduction

Once installation is complete, open Mission Planner by clicking on its system icon.

Once the installation of Mission Planner and driver is done, there will several pop-ups when you open the MP at the first time. The first pop-up clicks Yes and the others click NO.

There are six Menu Button in main menu.

FLIGHTDATA: flight attitude and data will show in real time on MP.


FLIGHTPLAN: planning the flight mission.

INITIAL SETUP: for firmware installation and update, Mandatory Hardware and Optional Hardware setup.

CONFIG/TUNING: including detailed PID setup and parameters change.

SIMULATION: make CrossRace Pro work as a simulator after upgrade a special simulation firmware .

HELP: you can get help when you have questions about MP.

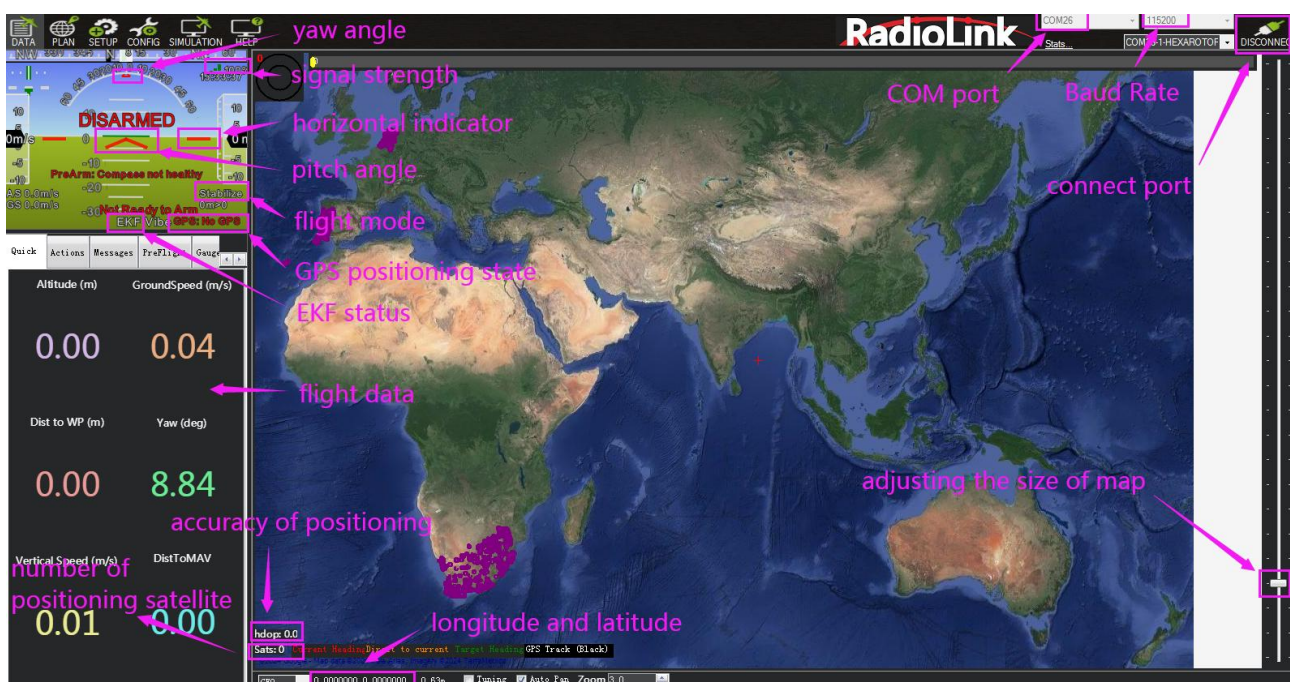

3. Initial Setup

3.1 Download and Install Firmware

* CrossRace Pro supports up to 12 channels output and is adaptable to a 2-8 axis multi-rotor.

* CrossRace Pro can set parameters or update firmware by RadioLink Mission Planner, ArduPilot Mission Planner, and QGC Mission Planner.


RadioLink Mission Planner download link: www.radiolink.com.cn/crossracepro_missionplanner

* CrossRace Pro can only update firmware from RadioLink. It cannot update the open-source firmware. CrossRace Pro only supports the firmware for multi-rotor.

CrossRace Pro firmware download link: www.radiolink.com.cn/crossracepro_firmware


Firmware update steps:

Open Mission Planner. Click SETUP--Install Firmware. Connect CrossRace Pro to the computer via a Type-C cable. Found board appears in the lower-left corner, indicating that the flight controller has been recognized. Click Load custom firmware in the lower-right corner (as shown below) and select the firmware downloaded from RadioLink official website. Follow the prompts to complete the firmware installation and wait for the flight controller firmware to install.

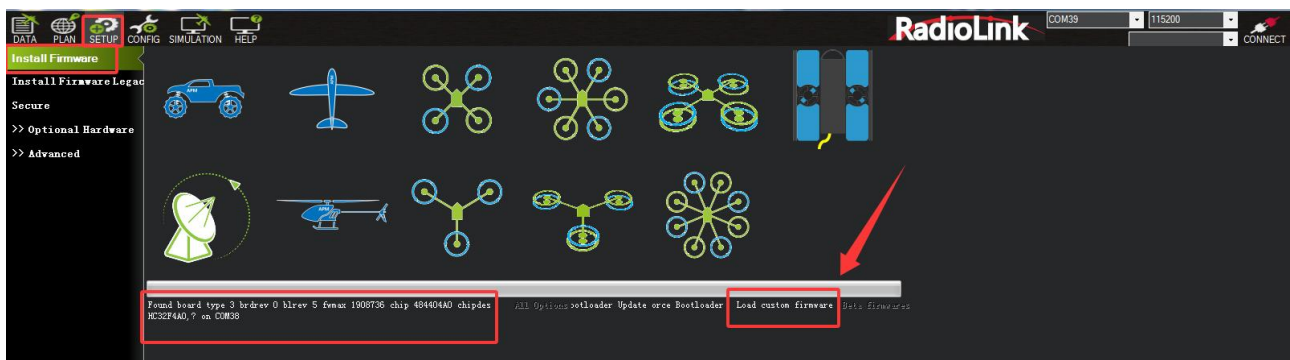


Attention:

- (1) Do not click CONNECT before you upload the new firmware, please click DISCONNECT if you have connected successful before. Upload new firmware will be not success if you have connected already.
- (2) Please do not upload new firmware by wireless data transmission because it has missed the reset signal.
- (3) If there' s without firmware version number, it means failed upload new firmware. It may cause of network problem, please re-upgrade firmware until shows the version.
- (4) Ports varies from different computers. Please select the correct port to connect. Connection may fail with several ports in use. Please remove the other connections, or enter Device Manager to view the port of the flight controller, just as below.

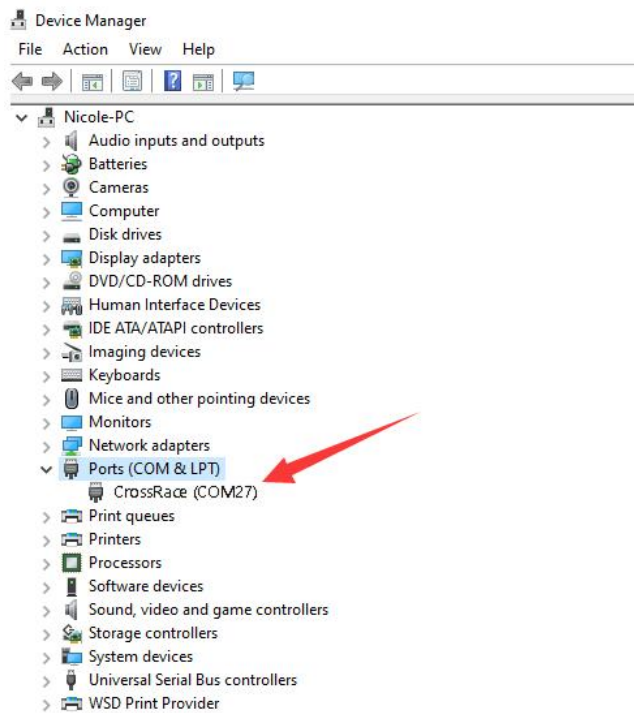

After it prompts Upload Done, you can click **CONNECT** in the upper right corner to connect your CrossRace Pro to Mission Planner and set it.

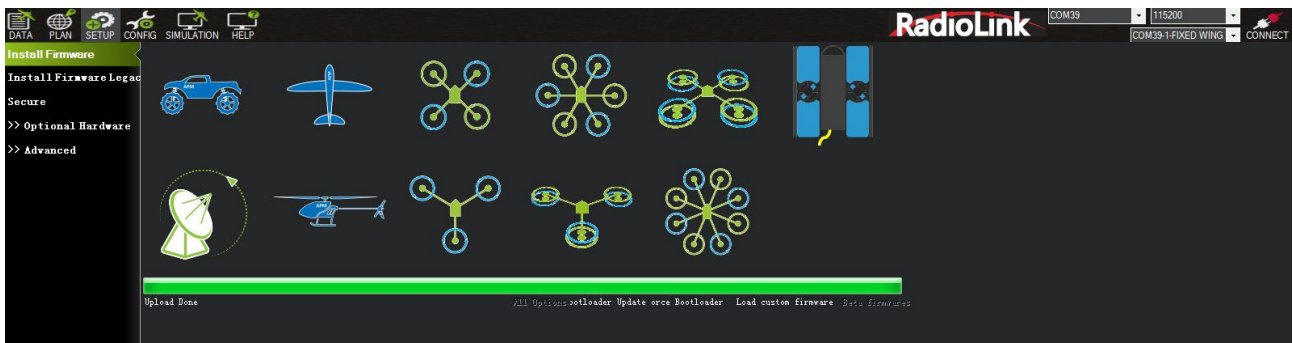

Pay attention:

- (1) It needs to take a long time to read the parameters.
- (2) There is no option of Load custom firmware in Mission Planner.
- (3) There is no Full Parameter List in INITIAL SETUP.


If you meet the above three problems, please set Layout from “Basic” to “Advanced” in CONFIG/TUNING menu if any of the three questions as below encountered when you installing the Mission Planner.




3.2 Frame Type

Please setup as below:

1. INITIAL SETUP
2. Mandatory Hardware—>Frame Type
3. Choose Quad or Hexa or other frame types as you need

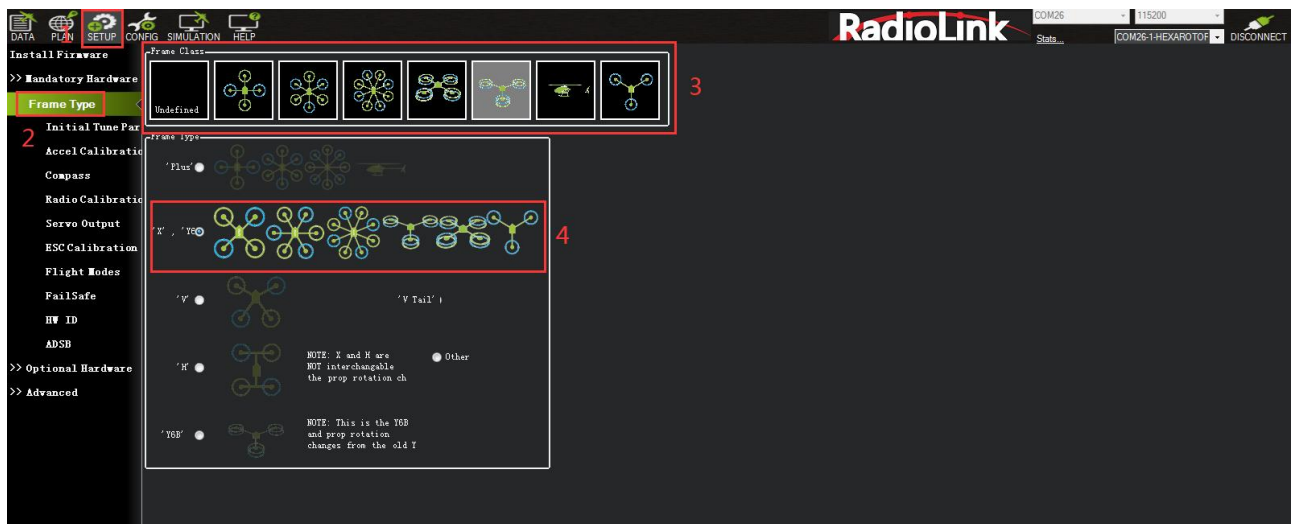


Note: When using a 4-in-1 ESC, you only need to complete the above 3 steps, then search for FRAME_TYPE in Full Parameter List, and select the appropriate value according to your motor installation. If the motor is front mounted (the propellers are on the top), modify the value to 12 (BetaFlightX). If the motor is mounted on the reverse side (the propellers are on the bottom), modify the value to 18 (BetaFlightXReversed) to be compatible with betaflyht's motor sequence.

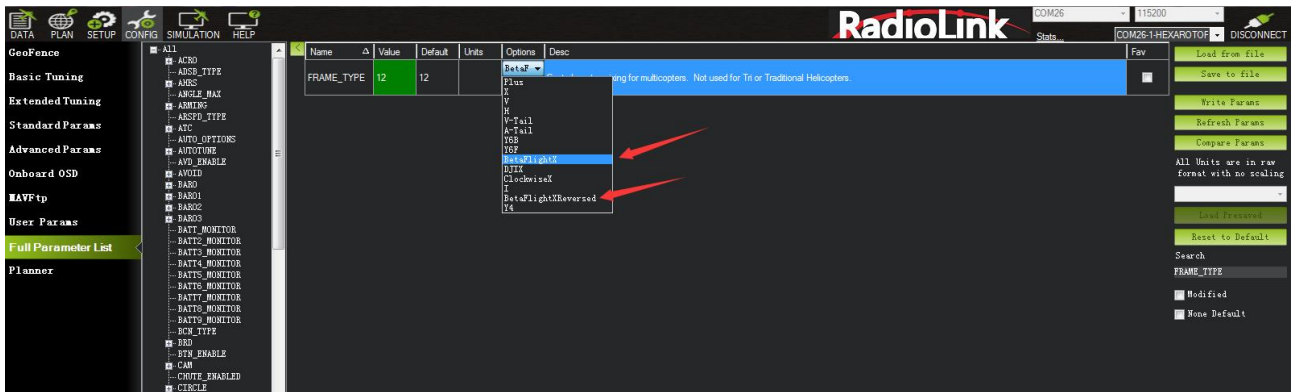


3.3 Accelerometer Calibration

Make sure the CrossRace Pro is keeping horizontal when doing the accel calibration.

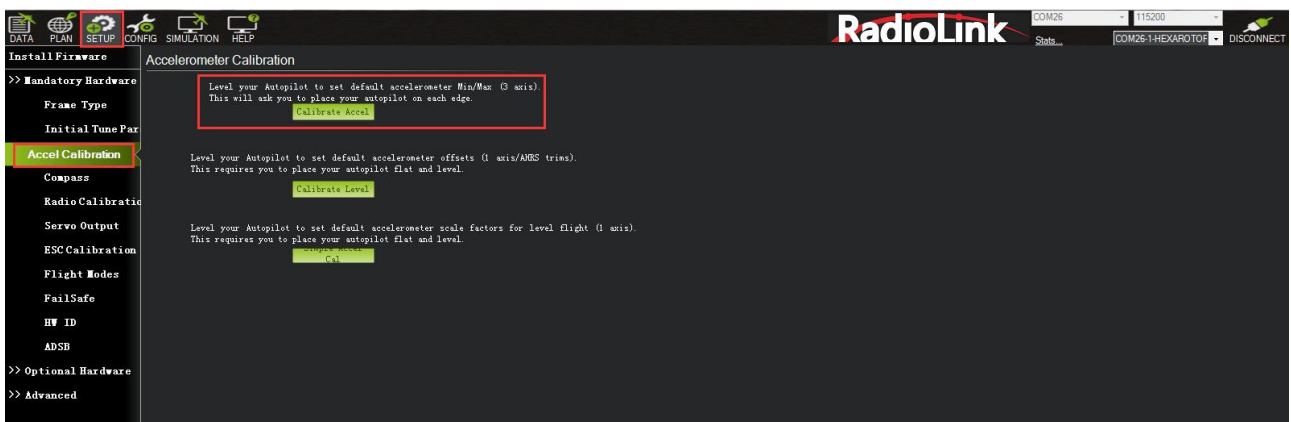

1. Place vehicle level and press any key to save setting.

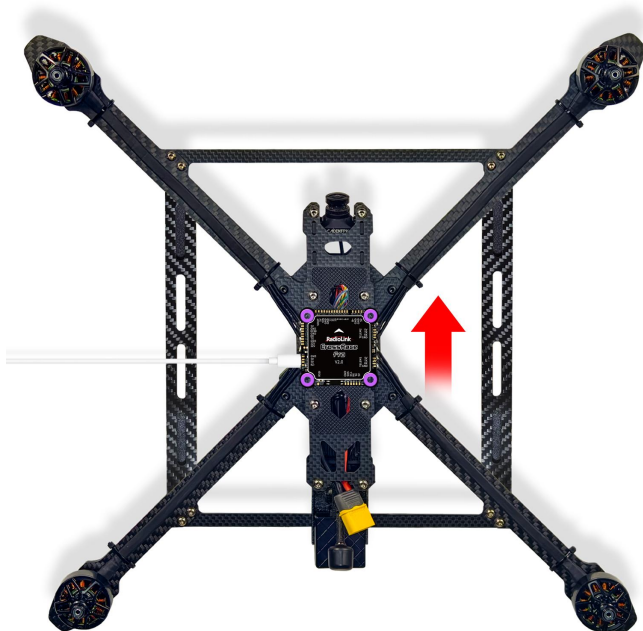


2. Place vehicle on its LEFT side and press any key to save setting.




3. Place vehicle on its RIGHT side and press any key to save setting.




4. Place vehicle DOWN and press any key to save setting.

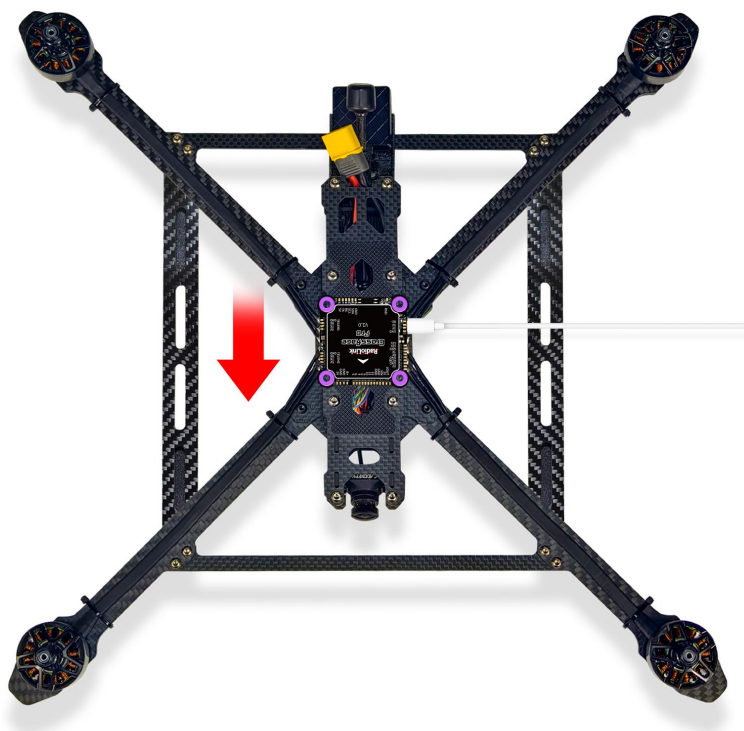

5. Place vehicle UP and press any key to save setting.

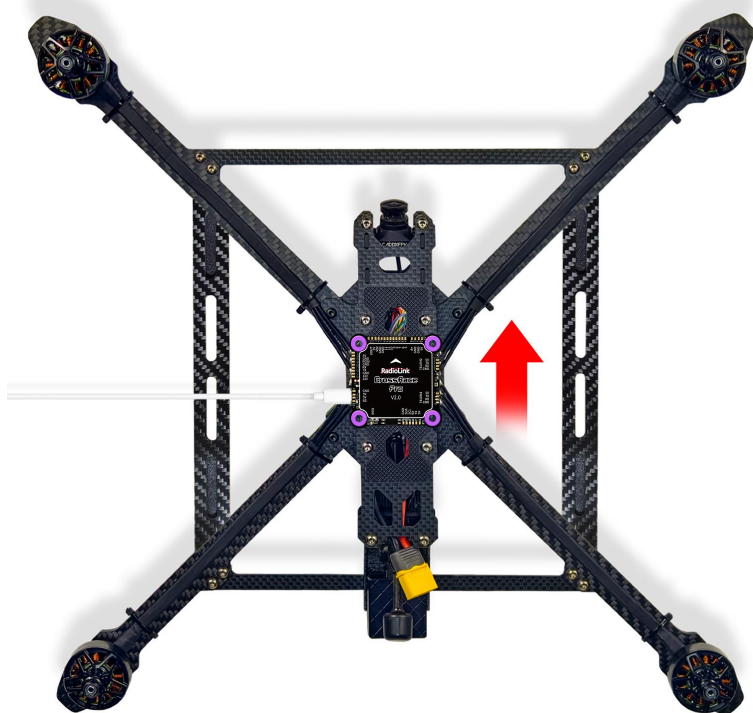


6. Place vehicle on its BACK and press any key to save setting.

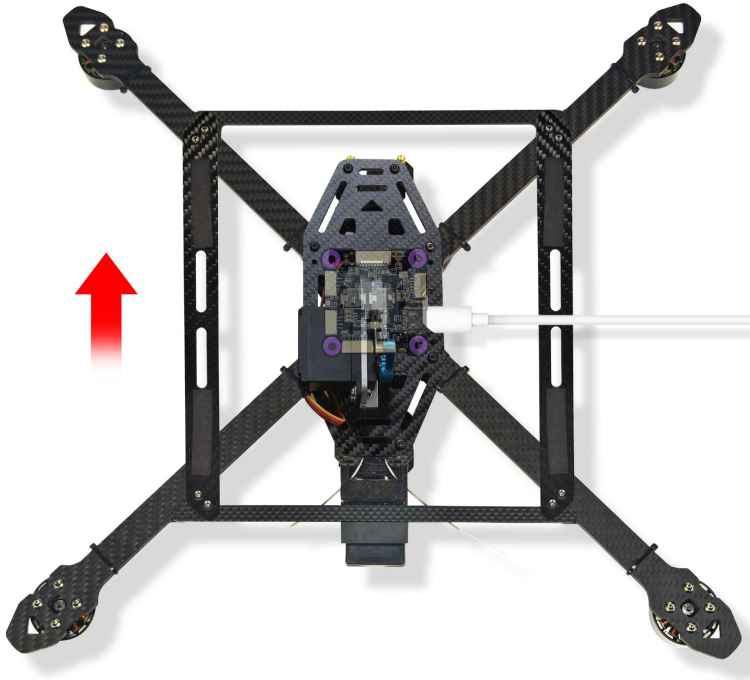


3.4 Compass Calibration

CrossRace Pro does not have a built-in compass. The compass calibration only needs to be done when CrossRace Pro is connected to a GPS.

Calibrate interface will show as picture below when use with a GPS. Check Use Compass 1.

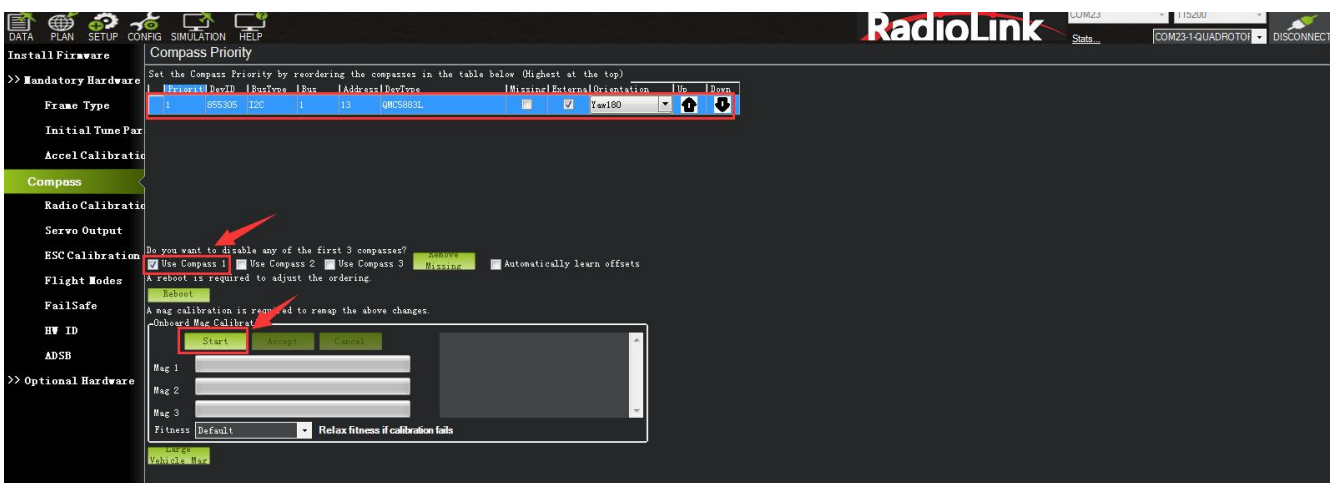


If the GPS mounted with the same direction with flight controller, then it need not to setup the direction of GPS in MP but if you mounted the GPS with the different direction of CrossRace Pro, you have to setup in the MP. Please refer to [Chapter 5.1](#)

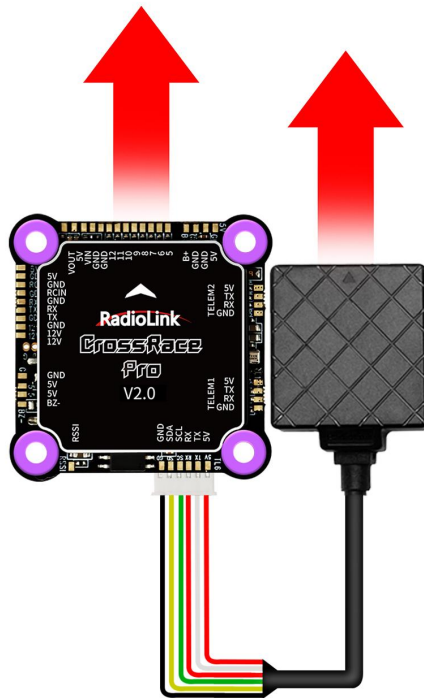


In this picture, the direction of the flight controller and GPS is the same.

Please fixed CrossRace Pro and TS100, then click “Start” and turn CrossRace Pro and TS100 till the progress bar of Mag 1 to the end and there will be a prompt: Please reboot the autopilot. Click OK and then reconnect CrossRace Pro to computer, compass calibrate success after restart the CrossRace Pro.

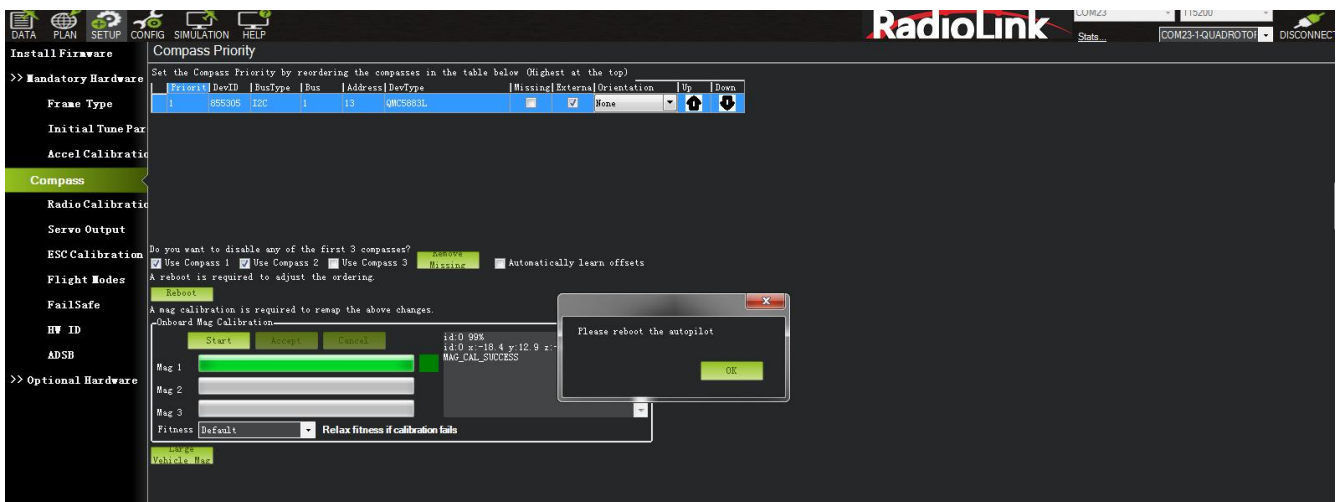







Attention:

When the progress bar moves to 100 and then restart from 0, it may because of the wrong calibrate action or interference. You can have a try to calibrate again till compass calibrate success, or setup the Fitness is Relaxed and recalibrate.

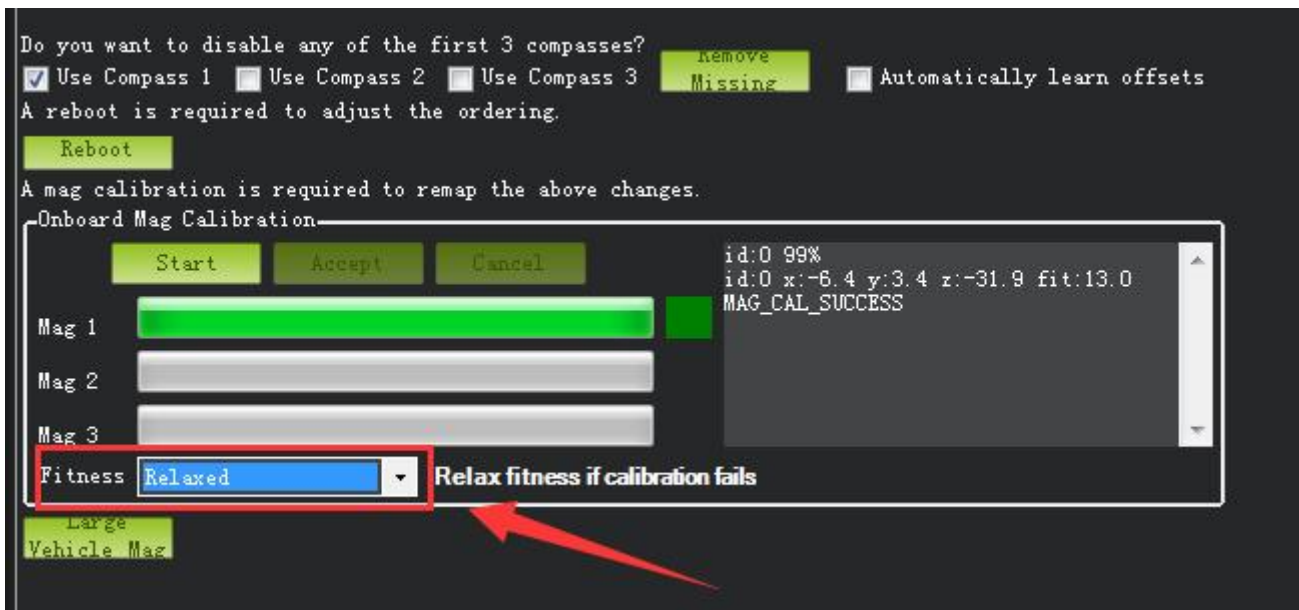

Calibrate the compass as these steps below:

Hold the vehicle in the air and rotate it slowly so that each side (front, back, left, right, top and bottom) points down towards the earth for a few seconds in turn.

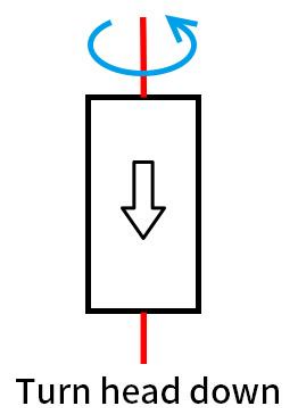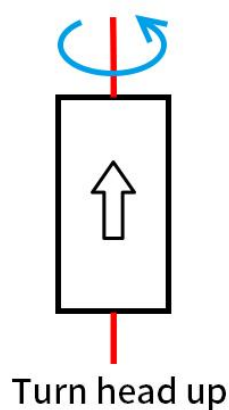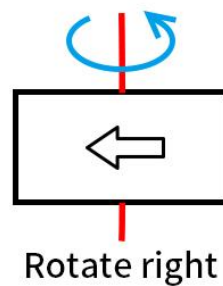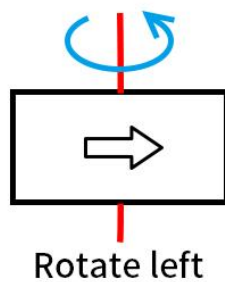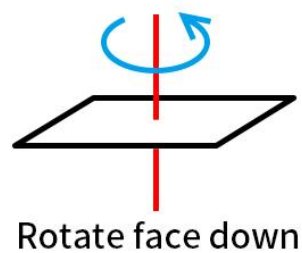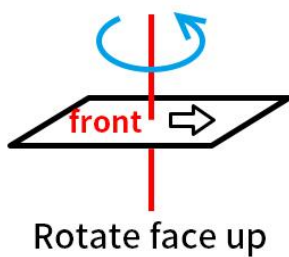

3.5 Radio Calibration

You need to connect the receiver first and then you can calibrate the radio. For details on receiver connection, please refer to [Chapter 5.2.3](#).

There are two common stick modes for the transmitter.

Mode 1: left stick controls pitch and yaw, the right stick will control throttle and roll.

Mode 2: left stick controls throttle and yaw; the right stick will control pitch and roll.

Copter default channel mappings are:

Channel 1: Roll

Channel 2: Pitch

Channel 3: Throttle

Channel 4: Yaw

Channel 5: Flight modes

Channel 6: (Optional) In flight tuning or camera mount (mapped to transmitter tuning knob)


Unused channels can be mapped to control additional peripherals.

For safety, you should disconnect the battery and/or remove propellers before performing radio calibration.


Bind your transmitter and receiver before calibrate radio, connect CrossRace Pro to computer via USB cable and then turn on transmitter. The RC receiver ask to connect to the RC port of CrossRace Pro. The transmitter will make AT9S Pro as an example in this manual.

Here are the settings on the transmitter:

1. Press Mode button to select MODEL MENU--MODE TYPE and select MULTIROTOR.

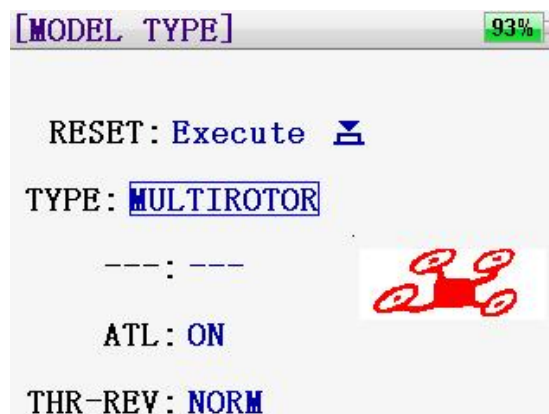

2. Setup CH3: THRO REV in REVERSE menu. Press Mode button to select MODEL MENU--REVERSE. Set the throttle channel to REV.


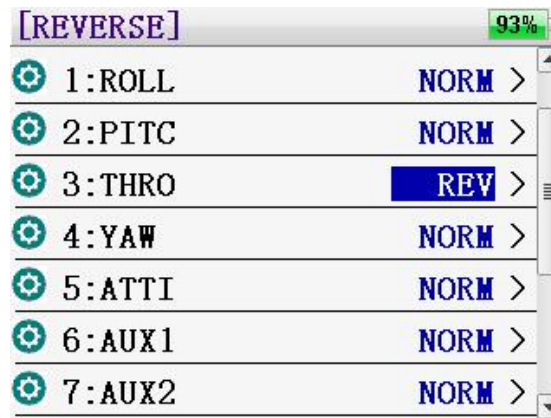


Radio Calibration Steps:

1. Open Mission Planner;
2. Choose the right COM and Baud rate;
3. Click the CONNECT;
4. Choose INITAIL SETUP—Mandatory Hardware—Radio Calibration;
5. Click “Calibrate Radio” .



There are two tool pop-ups after you click “OK” , one for make sure both your transmitter and receiver are powered on and connected, and the motor of your drone does not have power and without propellers.

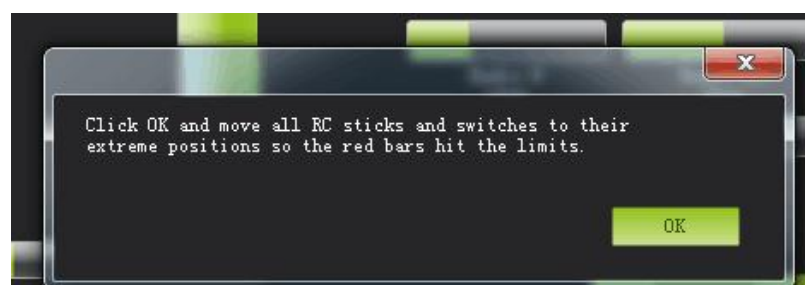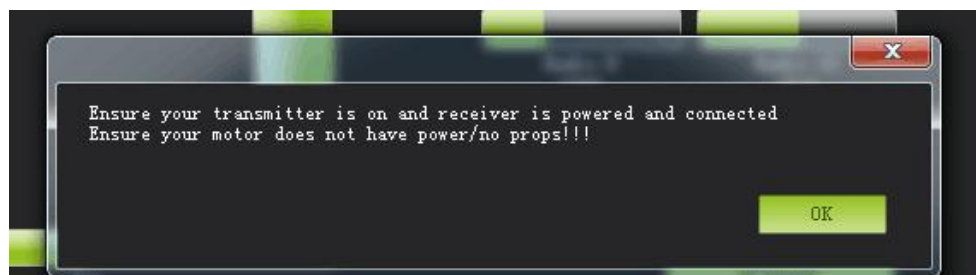

And then click “OK” and move all RC sticks and switches to their extreme positions so the red bars hit the limits.


If the red bars have not any change when you move the sticks, please check the receiver have connect success or not, make sure the receiver (maybe R9DS) is output SBUS signal (the blue LED of R9DS means work as SBUS signal). You can check if every corresponding red bar for every channel is work as below:

CH1: low position = roll (towards the left), up position= roll (towards the right).



CH2: low position =pitch(forward), up position =pitch(backwards).

CH3: low position =reduced speed, up position =speed up.

CH4: low position = yaw (towards the left), up position = yaw (towards the right).

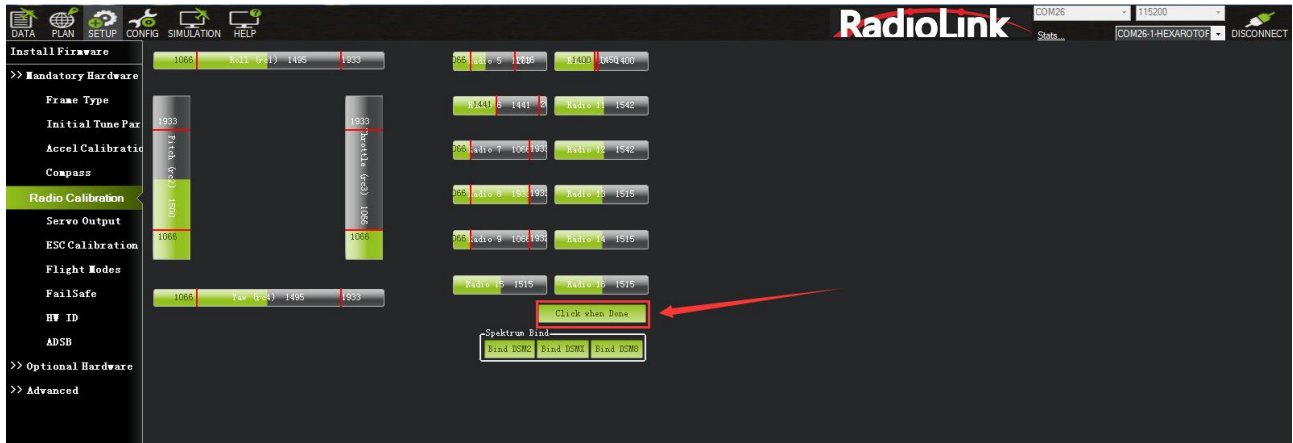

Click OK to save the radio calibration data.

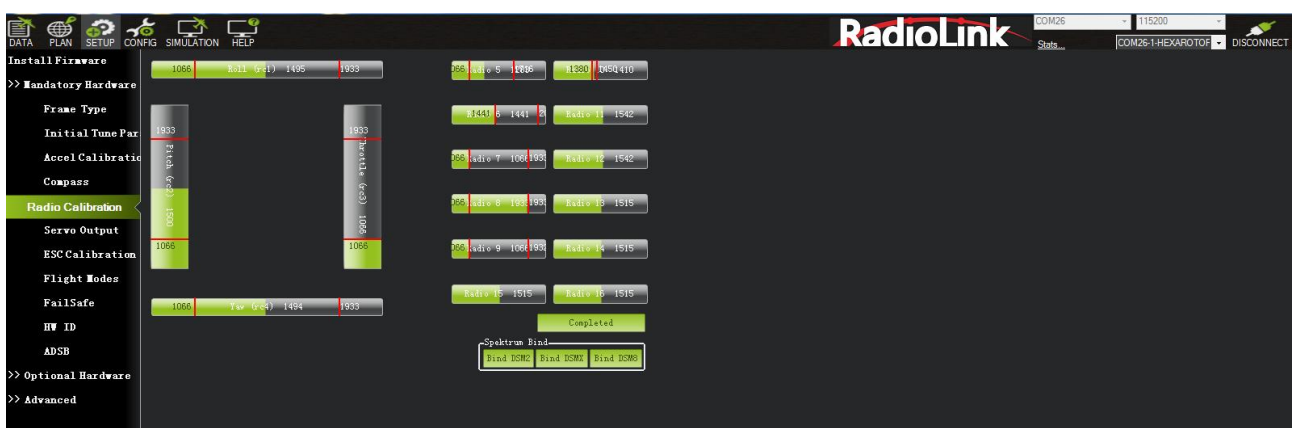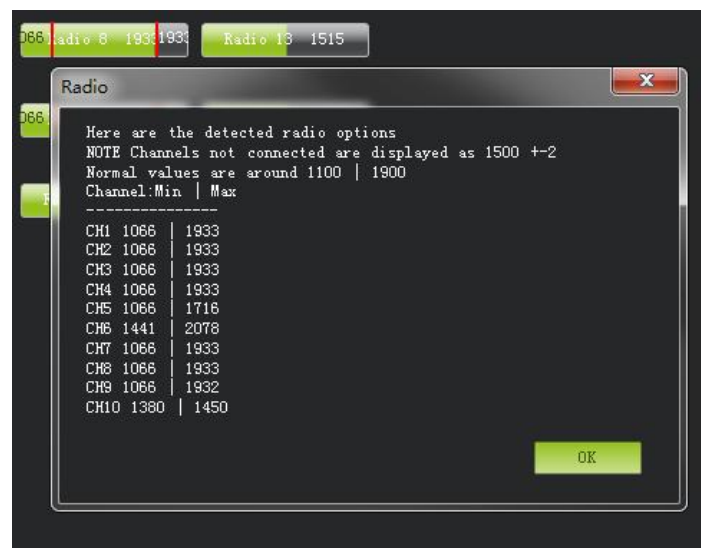

3.6 Flight Modes Setup

CrossRace Pro has many flight modes, and you usually choose six. If the six are not enough, you can also add the assistance of CH7 and CH8, up to eight flight modes.

Flight modes setting steps:


1. Connect CrossRace Pro and receiver (connect the RC port of CrossRace Pro, and make sure receiver work as SBUS signal).
2. Make sure transmitter bind to receiver success.
3. Make sure CrossRace Pro connect to Mission Planner success and click INITIAL SETUP—Mandatory Hardware—Flight modes, you can setup the flight modes you want in this menu.

In flight modes menu, it's very clear that the flight modes, the PWM numerical interval of six flight modes you have set and choose Simple Mode/Super Simple Mode or not.

Most of the RC fans setup the Flight Mode 1 is Stabilize, the other five flight mode will be setup according to users' flight habit.

First, you have to setup flight mode in transmitter. The setting steps as below:

1. Power on and turn on your transmitter.
2. Press Mode button twice to into ADVANCE MENU, press Push button into ATTITUDE setting menu, CH5 is default to the attitude control channel and please choose a 3 Posi-SW and a 2 Posi-SW to control the attitude. (For the flight mode settings of CH7 and CH8, open Mission Planner---configuration/debugging---extended parameters---Channel 7 opt/Channel 8 opt, and then assign 2 control switches for the two channels in the transmitter.)

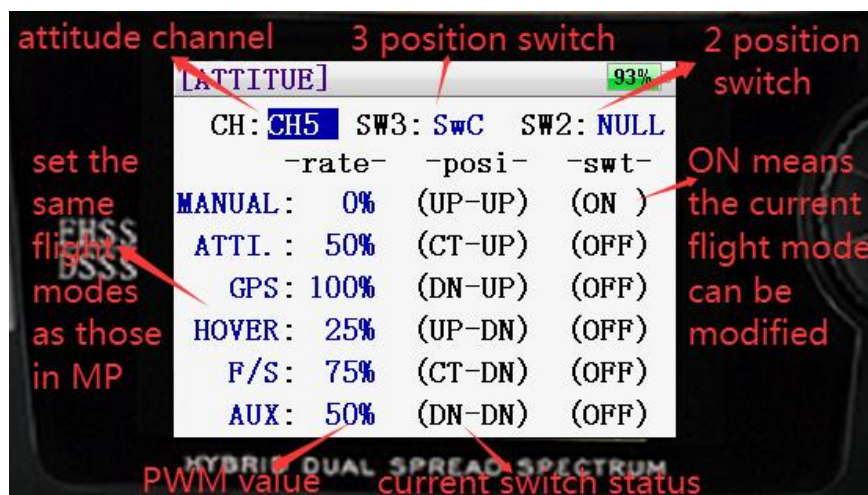


3. Setup Flight Mode 1 is Stabilize both in Mission Planner and transmitter.

Make sure the -swt- is ON (by press the 3 Posi-SW or 2 Posi-SW to make it ON or OFF) and then you can setup the PWM data.

Setup the PWM value according to the default numerical interval (change the value by turn the dial, press the Push button when you choose the right value.)

4. Mode 4 needs a two-way switch. Turn the switch to the corresponding mode. Set it in the same way as step 3.

5. Please check the introduction of simple mode and super simple mode, and then you can choose whether to start simple mode or super simple mode in the mode.

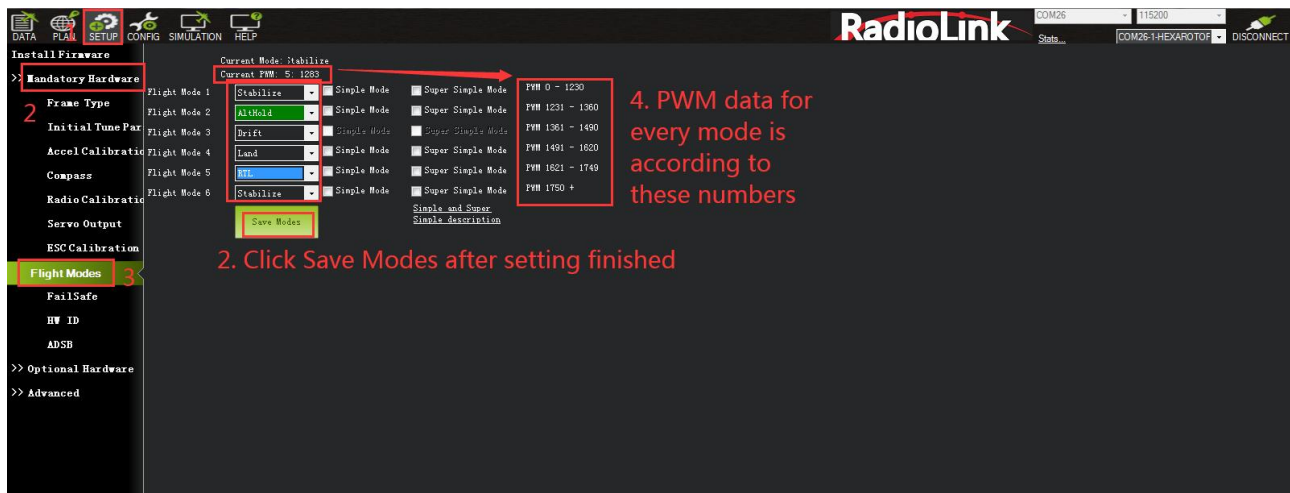

3.7 Flight Modes Introduction

3.7.1 Stabilize Mode

Stabilize mode allows you to fly your vehicle manually, but self-levels the roll and pitch axis.

If you're learning to fly, try Alt Hold or Loiter instead of Stabilize. You'll have fewer crashes if you don't need to concentrate on too many controls at once.

- Pilot's roll and pitch input control the lean angle of the copter. When the pilot releases the roll and pitch sticks the vehicle automatically levels itself.
- Pilot will need to regularly input roll and pitch commands to keep the vehicle in place as it is pushed around by the wind.
- Pilot's yaw input controls the rate of change of the heading. When the pilot releases the yaw stick the vehicle will maintain its current heading.
- Pilot's throttle input controls the average motor speed meaning that constant adjustment of the throttle is required to maintain altitude. If the pilot puts the throttle completely down the motors will go to their minimum rate (MOT_SPIN_ARMED) and if the vehicle is flying it will lose attitude control and tumble.
- The throttle sent to the motors is automatically adjusted based on the tilt angle of the vehicle (i.e. increased as the vehicle tilts over more) to reduce the compensation the pilot must do as the vehicle's attitude changes.

Always switch into a manual mode such as stabilize if the autopilot fails to control the vehicle. Maintaining control of your copter is your responsibility.

3.7.2 Acro Mode (FPV)

Acro mode (Rate mode) uses the RC sticks to control the angular velocity of the copter. Release the sticks and the vehicle will maintain its current attitude and will not return to level. Acro mode is useful for aerobatics such as flips or rolls, or FPV when smooth and fast control is desired.

ACRO mode trainer


ACRO_TRAINER setting

- 0 is disabled. This means the pilot operates in full Rate control with no automatic leveling nor angle-limiting performed by the autopilot.

- 1 is automatic leveling. The vehicle will automatically return to the level when the pilot releases the sticks. The aggressiveness with which it returns to level can be controlled with the ACRO_BAL_ROLL and ACRO_BAL_PITCH parameters. The default of 1.0 will cause it to return to level at up to 30deg/sec. Higher values will make it return more quickly.

- 2 is Default to automatic leveling and lean angle limited. Includes the automatic leveling as option #1 but in addition the vehicle will not lean more than 45 degrees (this angle can be configured with the ANGLE_MAX parameter).

The trainer can be enabled/disabled using the Ch7/Ch8 switches. With a 3 position switch the off position (i.e. PWM < 1200) will disable the trainer, middle position will enable option #1 (automatic leveling) and the top position (i.e. PWM > 1800) will enable option #2 (leveling and lean angle limited). With a 2-position switch only options #0 (disabled) and option #2 (leveling & limited) are possible.

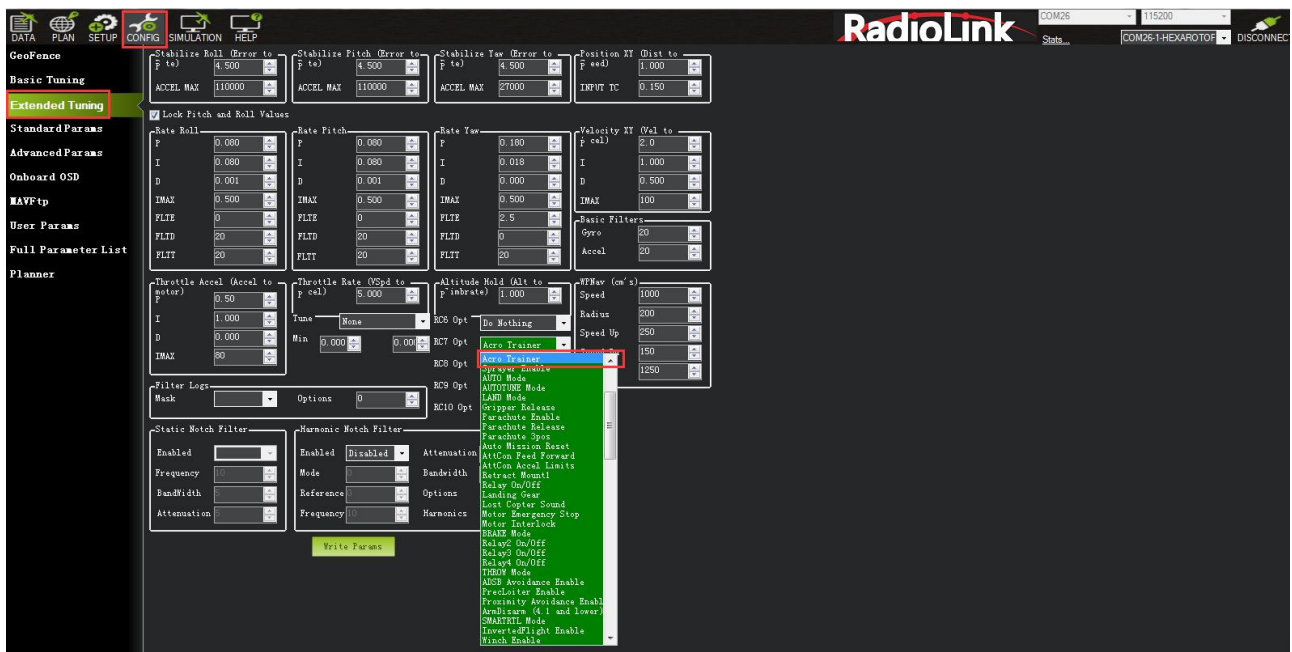

Parameters Setting:

ACRO_RP_RATE controls the rotation rate of the roll and pitch axes, by default 360, which represents a rotation rate of 360 degrees/second. Higher values result in higher spin rates, lower values result in lower spin rates.

ACRO_Y_RATE controls the rotation speed of the yaw axis. By default 202.5, like roll and pitch, represents a rotation rate of 202.5 degrees/second.

ACRO_RP_EXPO Acro roll/pitch Expo to allow faster rotation when stick at edges.

ACRO_Y_EXPO Acro yaw expo to allow faster rotation when stick at edges.


ACRO_THR_MID modifies the ACRO mode throttle center. 0 means turning off the ACRO throttle center, and 1 means turning the ACRO throttle center on.

Warning! If ACRO_THR_MID is set to 1, ACRO mode throttle will be changed into linear throttle. When the aircraft switches from auto-throttle mode (such as AltHold mode, PosHold mode etc.) to ACRO mode, please check whether the throttle stick is in the low position when switching flight modes, If the stick is in the middle position, the aircraft will rush upwards, which may cause dangerous consequences such as loss of control, crash, and casualties.

ATC_THR_MIX_MAN Modifies the priority of throttle and attitude. The larger the value, the higher the attitude priority. The value is usually adjusted to the maximum value of 4 when flying manually.

3.7.3 Altitude Hold Mode

In altitude hold mode, Copter maintains a consistent altitude while allowing roll, pitch, and yaw to be controlled normally. This page contains important information about using and tuning AltHold. Automatic altitude hold is a feature of many other flight modes (Loiter, Sport, etc.) so the information here pertains to those modes as well.

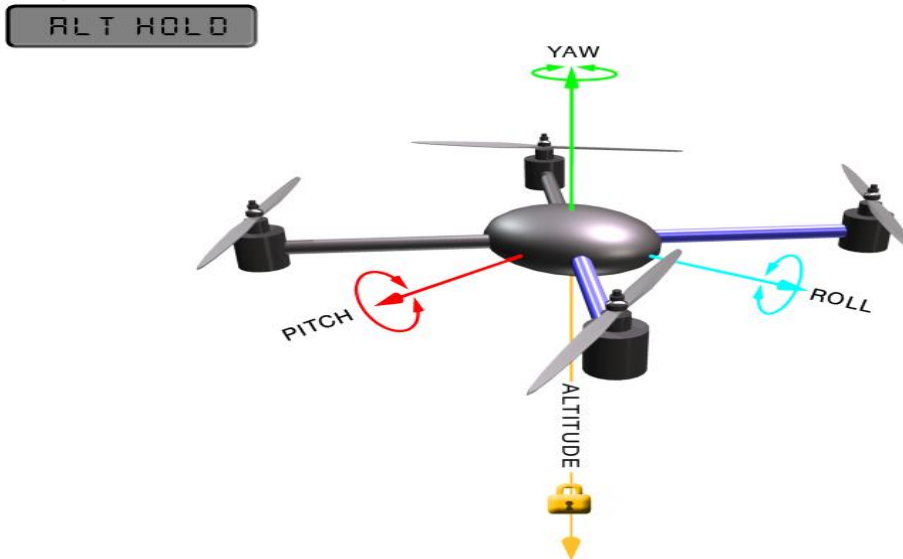

Note: The flight controller uses a barometer which measures air pressure as the primary means for determining altitude (“Pressure Altitude”) and if the air pressure is changing in your flight area due to extreme weather, the copter will follow the air pressure change rather than actual altitude. When fitted and enabled, a downward facing rangefinder such as LiDAR or SONAR will automatically provide even more accurate altitude maintenance, up to the limit of the sensor.

How to control

The pilot can control the climb or descent rate of the vehicle with the throttle stick. If the throttle stick is in the middle (40% ~ 60%) the vehicle will maintain the current altitude. Outside of the mid-throttle dead zone (i.e. below 40% or above 60%) the vehicle will descend or climb depending upon the deflection of the stick. When the stick is completely down the copter will descend at 2.5m/s and if at the very top it will climb by 2.5m/s. The maximum vertical ascending velocity and descending velocity are set by the parameters PILOT_SPEED_UP and PILOT_SPEED_DN respectively.


The size of the deadband can be adjusted with the THR_DZ parameter (AC3.2 and higher only). This param's value should be between “0” and “400” with “0” meaning no deadband. “100” would produce a deadband 10% above and below mid throttle (i.e. deadband extends from 40% to 60% throttle stick position).

AC3.1 and later allow arming and disarming in altitude hold mode. When disarming, the copter may need to rest in the landing position for a few seconds to allow the “landing checker” to verify that the copter has landed before you are able to disarm.

3.7.4 Auto Mode

In Auto mode the copter will follow a pre-programmed mission script stored in the autopilot which is made up of navigation commands (i.e. way points) and “do” commands (i.e. commands that do not affect the location of the copter including triggering a camera shutter). CrossRace Pro multi-rotor firmware can store up to 2617 waypoints, commands and events at one time.

AUTO

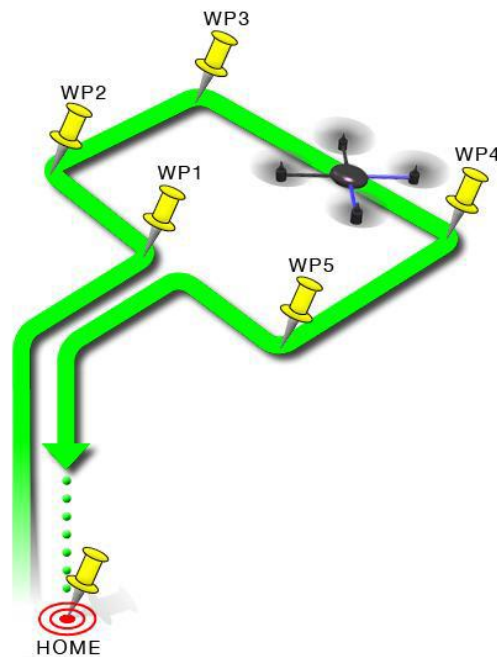

AUTO mode incorporates the altitude control from AltHold mode and position control from Loiter mode and should not be attempted before these modes are flying well. All the same requirements apply including ensuring that vibration levels and compass interference levels are acceptable and that the GPS is functioning well including returning an HDOP of under 2.0.

AUTO should be set-up as one of the Flight Modes on the flight mode switch.

Make sure that the GPS is positioning first:

- The LED of CrossRace Pro is green.
- The LED of GPS and compass module is blinking.

If starting the mission while the copter is on the ground the pilot should ensure the throttle is down, then switch to the Auto flight mode, then raise the throttle. The moment that the throttle is raised above zero, the copter will begin the mission.

If starting the mission from the air the mission will begin from the first command the moment that the flight mode switch is moved to Auto. If the first command in the mission is a take-off command but the vehicle is already above the take-off command's altitude the take-off command will be considered completed and the vehicle will move onto the next waypoint.

At any time, the pilot can retake control from the autopilot by returning the flight mode switch to another flight mode such as Stabilize or Loiter. If the pilot then switches to AUTO again, the mission will restart from the first command.

During the mission the pilot's roll, pitch and throttle inputs are ignored but the yaw can be overridden with the yaw stick. This allows the pilot to for example aim the nose of the copter (which might have a

camera on it) as the copter flies the mission. The autopilot will attempt to retake yaw control as the vehicle passes the next waypoint.

Ending a mission

Missions should normally have an RTL as their final command to ensure the copter will return after the mission completes. Alternatively, the final command could be a LAND with a different location. Without

a final RTL or LAND command the copter will simply stop at the final waypoint and the pilot will need to retake control with the transmitter.

Remember that when using RTL, the copter will return to the “home” position which is the location where the copter was armed.

As the copter touches down at the end of the mission the pilot should move the throttle to zero at which point the autopilot will disarm the motors if it also believes that it has landed.

3.7.5 PosHold Mode

The PosHold flight mode (previously known as “Hybrid”) is a new mode for AC3.2. It is similar to Loiter in that the vehicle maintains a constant location, heading, and altitude but is generally more popular because the pilot stick inputs directly control the vehicle’ s lean angle providing a more “natural” feel.

When switched on, PosHold mode will automatically attempts to maintain the current location, heading and altitude. Good GPS position, low magnetic interference on the compass and low vibrations are all important in achieving good loiter performance.

How to control

The pilot can control the copter’ s location horizontally and vertically with the control sticks.

- Horizontal location can be adjusted with the Roll and Pitch control sticks with the default maximum lean angle being 45 degrees (angle can be adjusted with the ANGLE_MAX parameter). When the pilot releases the sticks, the copter will lean back to bring the vehicle to a stop.
- Altitude can be controlled with the Throttle control stick just as in AltHold mode.
- The heading can be set with the Yaw control stick.
- You may arm in PosHold mode but only once the GPS has 3D lock and the HDOP has dropped to 2.0 or lower.

The HDOP value can be made clearly visible through the mission planner’ s Quick screen by double clicking and then selecting “gpshdop” from the large grid of checkboxes.


- The maximum brake-angle can be set with the PHLD_BRAKE_ANGLE parameter (i.e. 3000 = the vehicle will lean back up to 30degrees).
- The speed the vehicle rotates back to the maximum angle can be set with the PHLD_BRAKE_RATE parameter (i.e. 8 = rotates back at 8 degrees per second)).

3.7.6 RTL Mode

This very simple flight mode simply stops the vehicle as soon as possible using the Loiter controller. Once invoked, this mode does not accept any input from the pilot. This mode requires GPS.

RTL mode (Return to Launch mode) navigates Copter from its current position to hover above the home position. The behavior of RTL mode can be controlled by several adjustable parameters.

When RTL mode is selected, the copter will return to the home location. The copter will first rise to RTL_ALT before returning home or maintain the current altitude if the current altitude is higher than RTL_ALT. The default value for RTL_ALT is 15m.

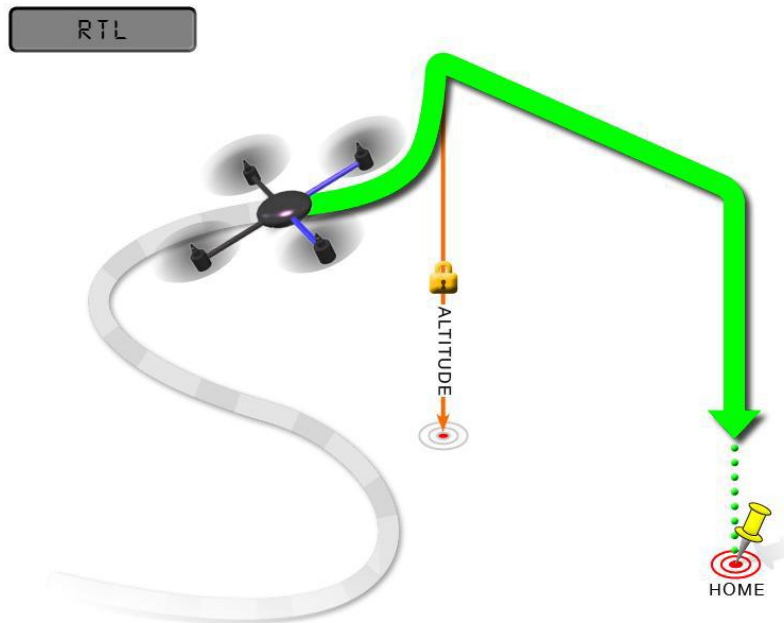

RTL is a GPS-dependent move, so it is essential that GPS lock is acquired before attempting to use this mode. Before arming, ensure that the APM's blue LED is solid and not blinking. For a GPS without compass, the LED will be solid blue when GPS lock is acquired. For the GPS+Compass module, the LED will be blinking blue when GPS is locked.

RTL will command the copter to return to the home position, meaning that it will return to the location where it was armed. Therefore, the home position is always supposed to be your copter's actual GPS takeoff location, unobstructed and away from people. For Copter if you get GPS lock and then ARM your copter, the home position is the location the copter was in when it was armed. This means if you execute an RTL in Copter, it will return to the location where it was armed.

In RTL mode the flight controller uses a barometer which measures air pressure as the primary means for determining altitude ("Pressure Altitude") and if the air pressure is changing in your flight area, the copter will follow the air pressure change rather than actual altitude (unless you are within 20 feet of the ground and have SONAR installed and enabled).

Options (User Adjustable Parameters)

1. RTL_ALT: The minimum altitude the copter will move to before returning to launch.
 - (1) Set to zero to return at the current altitude.
 - (2) The return altitude can be set from 1 to 8000 centimeters.
 - (3) The default return altitude Default is 15 meters (1500).
2. RTL_ALT_FINAL: The altitude the copter will move to at the final stage of "Returning to Launch" or after completing a Mission.
 - (1) Set to zero to automatically land the copter.
 - (2) The final return altitude may be adjusted from 0 to 1000 centimeters.
3. RTL_LOIT_TIME: Time in milliseconds to hover/pause above the "Home" position before beginning final descent.

The "Loiter" time may be adjusted from 0 to 60,000 milliseconds.
4. WP_YAW_BEHAVIOR: Sets how the autopilot controls the "Yaw" during Missions and RTL.
 - (1) 0 = Never change Yaw.
 - (2) 1 = Face Next Waypoint including facing home during RTL.

(3) 2 = Face Next Waypoint except for RTL (i.e. during RTL vehicle will remain pointed at its last heading).

5. LAND_SPEED: The descent speed for the final stage of landing in centimeters per second.

The landing speed is adjustable from 20 to 200 centimeters per second.

6. RTL_CLIMB_MIN: The vehicle will climb at least these many meters at the first stage of the RTL. By default, this value is zero. (only Copter-3.3 and above)

7. RTL_SPEED: The horizontal speed (in cm/s) at which the vehicle will return to home. By default, this value is zero meaning it will use WPNAV_SPEED (Only Copter-3.4 and higher).

8. RTL_CONE_SLOPE: Defines the slope of an inverted cone above home which is used to limit the amount the vehicle climbs when RTL-ing from close to home. Low values lead to a wide cone meaning the vehicle will climb less, High values will lead to the vehicle climbing more (Supported in Copter-3.4 and higher).

Notes:

1. Other navigation settings also have an influence over RTL mode:

(1) WPNAV_ACCEL

(2) WPNAV_SPEED_DN

(3) WPNAV_SPEED_UP

2. To use RTL, GPS lock needs to be achieved (Blue GPS LED and Blue APM LED on solid not blinking) before arming and takeoff to establish the home or launch position.

3. Landing and re-arming the copter will reset home, which is a great feature for flying at airfields.

4. If you get lock for the first time while flying, your home will be set at the location of lock.

5. If you set the RTL_ALT to a number at other than 0 it will go to and maintain that altitude while returning.

6. RTL uses WPNAV_SPEED to determine how fast it travels.


7. Once the copter arrives at the home location the copter will pause for RTL_LOIT_TIME milliseconds, timeout (AUTO_LAND), then land.

3.7.7 Simple and Super Simple Modes

“Simple” and “Super Simple” modes can be used in combination with nearly all flight modes except the Acro and Drift (in these flight modes the setting is ignored).

- “Simple” and “Super Simple” modes allow the pilot to control the movement of the copter from the pilot’s point of view regardless of which way the copter is facing.
- This is useful for new pilots who have not mastered adjusting their roll and pitch inputs depending upon which way the vehicle is facing and for cases when the copter is far enough away that its heading is not apparent.
- Simple Mode allows you to control the copter relative to the copters heading at takeoff and relies only on a good compass heading.
- Super Simple Mode allows you to control the copter relative to its direction from home (i.e. where it was armed) but requires a good GPS position.
- Either mode can be assigned to a particular flight mode switch position or can be enabled/disabled from the Ch7/Ch8 switches.


Normal Mode

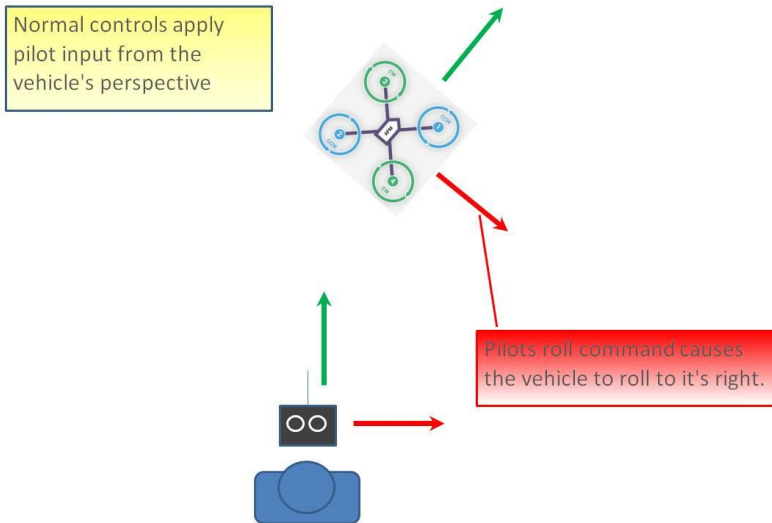

Without Simple or Super Simple enabled, the pilot's transmitter stick inputs are applied in the orientation of the copter. For example, in the diagram above when the pilot applies roll input right (red) the vehicle rolls to its right.

With the copter is facing in the same direction as the pilot, it is relatively easy to control the vehicle but when the vehicle is facing towards the pilot an inexperienced pilot will feel that the controls are all reversed. I.e. if the pilot inputs right roll, the vehicle will move to the left from the pilot's point of view.

Simple Modes

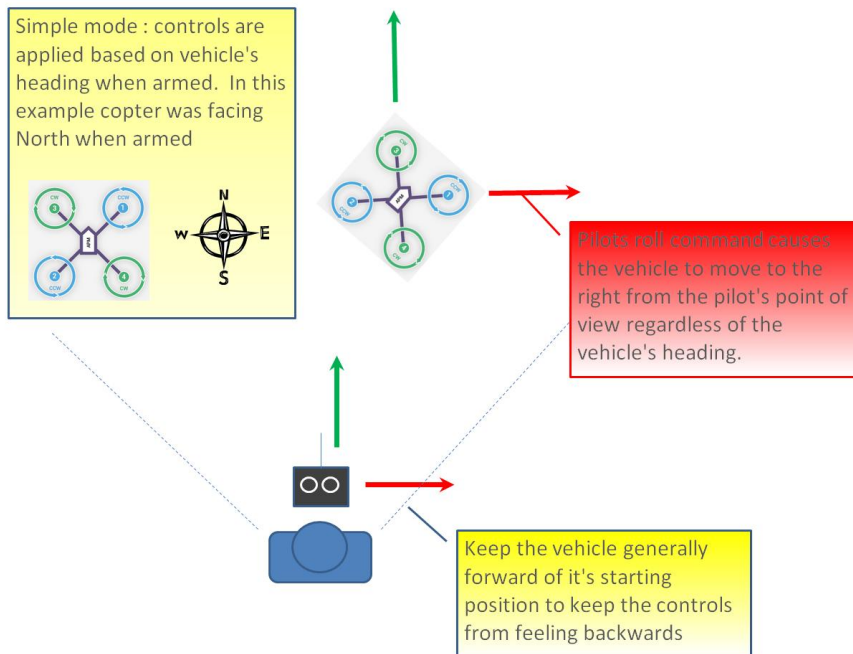


Similar to the "care free" mode on other systems, this mode allows you to fly your copter as though it were pointed in the direction it was pointed when it was armed regardless of its current heading orientation. So, if you hold the pitch stick forward the copter will fly away from you, pull the pitch stick back and it will come back towards home. You can even apply yaw to spin the copter in any direction but the movement of the copter's position relative to the stick inputs will behave exactly as it did at takeoff.

Generally, when arming you should stand behind the vehicle with its nose pointing directly away from you. While flying you should try to keep the vehicle flying in front of its starting position because if it flies behind you all the controls will feel reversed.

As mentioned above simple mode is also very useful in emergency situations where the copter is far enough away that it is very difficult to determine its heading.

Super Simple Modes

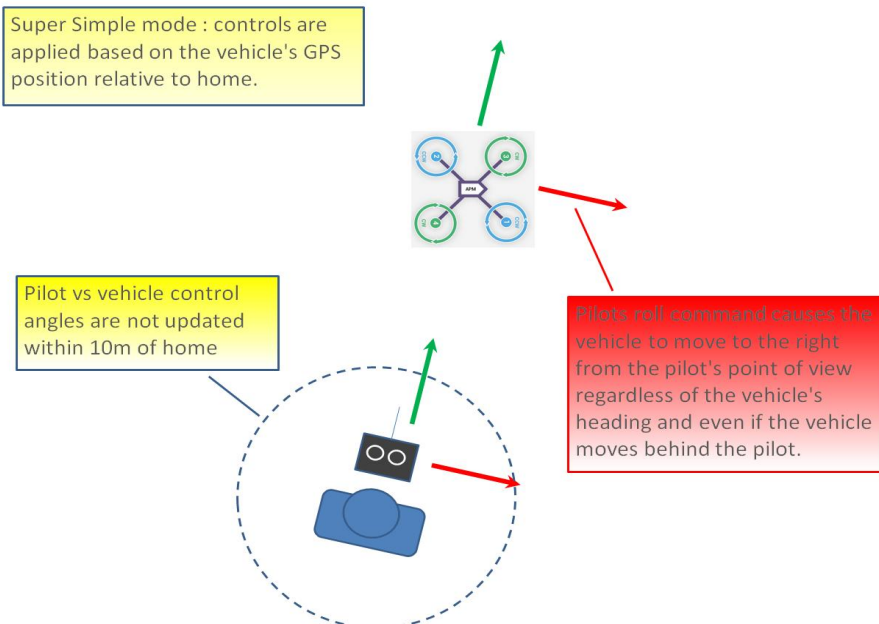

Super Simple mode is the same as simple mode except that it uses the vehicle' s position relative to home instead of the vehicle' s initial heading when it was armed. This means that no matter where the vehicle is, pulling the pitch back will cause it to return towards home regardless of the vehicle' s actual heading.

The advantage over simple mode is that the controls are applied from the pilot' s point of view even when the copter flies behind the pilot/home location.

If the pilot holds full right roll the vehicle will fly a circle clockwise around the pilot (although the circle' s radius may tend to grow slightly with each orbit due to "lag").

The disadvantage is that mode require a GPS lock because so you should ensure you have GPS lock before take-off.

The orientation is not updated when the vehicle is within 10m of home meaning close fly-bys of the home location should be avoided.

To ensure the controls are correct right at take-off, as with simple mode, you should arm with the pilot standing behind the vehicle and with both pilot and vehicle pointing in the same direction.

3.7.8 More Flight Modes

Guided Mode: Guided mode is a capability of Copter to dynamically guide the copter to a target location wirelessly using a telemetry radio module and Mission Planner application. This page provides instructions for using guided mode.

Loiter Mode: Loiter Mode automatically attempts to maintain the current location, heading and altitude. The pilot may fly the copter in Loiter mode as if it were in a more manual flight mode but when the sticks are released, the vehicle will slow to a stop and hold position.

Circle Mode: Circle will orbit a point located CIRCLE_RADIUS centimeters in front of the vehicle with the nose of the vehicle pointed at the center.

Drift Mode: This page provides tips for flying in Drift Mode and methods for tuning your copter to fly optimally in Drift Mode.

Sport Mode: Sport Mode is also known as “rate controlled stabilize” plus Altitude Hold.

Flip Mode: Vehicle will flip on its roll or pitch axis depending upon the pilot’s roll and pitch stick position. Vehicle will rise for 1 second and then rapidly flip. The vehicle will not flip again until the switch is brought low and back to high. Give yourself at least 10m of altitude before trying flip for the first time!

AutoTune: AutoTune attempts to automatically tune the Stabilize P, Rate P and D, and maximum rotational accelerations to provide the highest response without significant overshoot. Copter needs to be “basically” flyable in AltHold mode before attempting to use AutoTune as the feature needs to be able to “twitch” the copter in the roll and pitch axis.

Land Mode: LAND Mode attempts to bring the copter straight down.

Break Mode: This very simple flight mode simply stops the vehicle as soon as possible using the Loiter controller. Once invoked, this mode does not accept any input from the pilot. This mode requires GPS.

Throw Mode: This slightly dangerous flight mode allows the pilot to throw the vehicle into the air (or drop the vehicle) in order to start the motors. Once in the air, this mode does not accept any input from the pilot. This mode requires GPS.

Avoid_ADSB: for ADS-B based avoidance of manned aircraft. Should not be set-up as a pilot selectable flight mode.

Guided_NoGPS: which is meant for developer use only.

The details introduction about flight modes can check on website here:

<http://ardupilot.org/copter/docs/flight-modes.html>


4. F/S(Fail Safe) Setting

4.1 Radio Fail Safe Setup

CrossRace Pro supports Return-To-Launch in cases where contact between the Pilot’s RC transmitter and the flight controller’s receiver is lost. This page explains this failsafe’s setup and testing. Note the “Radio failsafe” was previously called “Throttle failsafe” because of the way in which some receivers use the throttle channel to signal the loss of contact.

F/S setting steps:

Setup in transmitter: setup the throttle trim to -120 by trim switch and then press Mode button one second into BASIC MENU, choose and into F/S menu, put the throttle stick to the bottom to setup 3: THRO 3%. Please setup the throttle trim back to 0 after setup the THRO 3% success.

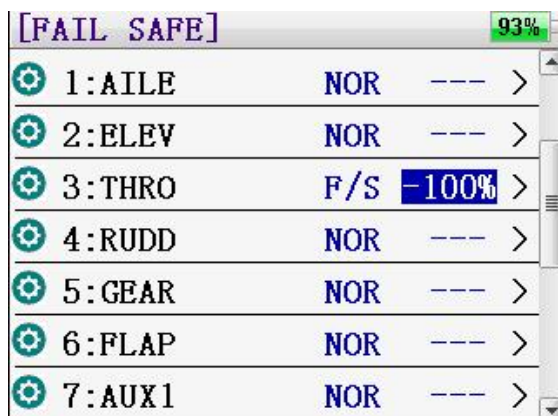

Receiver and flight controller CrossRace Pro setup:

By default, a newly purchased receiver will be set-up to simply hold all channels at their last known position when the receiver and transmitter lose contact. This is not good because the flight controller has no way to know that the Pilot has lost control of the vehicle. Instead the receiver must be set-up to signal to the flight controller it has lost contact and there are two ways that it can do this (the method depends upon the receiver):

“Low-Throttle” method - the receiver pulls the throttle channel (normally channel 3) to a value below the bottom of its normal range (normally below 975).

With the LiPo battery disconnected:


1. Connect your flight controller to the mission planner and select Initial Setup >> Mandatory Hardware >> Failsafe.
2. Set the Failsafe Options to one of the three options:
 - (1) “Enabled always RTL” to force the vehicle to always RTL even if flying a mission in AUTO mode.
 - (2) “Enabled Continue with Mission in AUTO” to allow the vehicle to continue with missions even if it takes the vehicle outside of RC range (not recommended). In all other cases the vehicle will RTL.
 - (3) “Enable always LAND” to force the vehicle to Land immediately if it loses RC contact.

Set the “FS PWM” value to be:

- (1) at least 10 PWM higher than your Channel 3’ s PWM value when the throttle stick is fully down and the transmitter is off.
- (2) at least 10 lower than your channel 3’ s PWM value when the throttle stick is fully down and the transmitter is on.
- (3) above 910.



Click OK to into the failsafe setting menu.

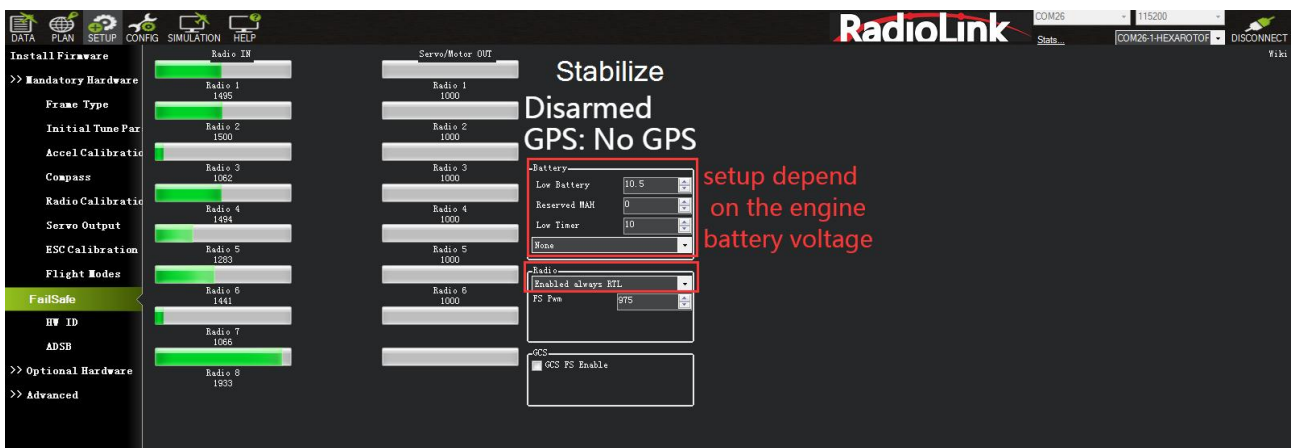

You can turn off transmitter to check if the Failsafe function setup success(the PWM of CH3 is smaller than 975).

If enabled and set-up correctly the radio Failsafe will trigger if:

- (1) The pilot turns off the RC transmitter.
- (2) The vehicle travels outside of RC range.
- (3) The receiver loses power (unlikely).
- (4) The wires connecting the receiver to the flight controller are broken (unlikely).

1. Set battery fail safe

Set battery fail safe according to the aircraft power consumption, battery voltage, and flight distance. When the battery voltage is lower than this value, there will be enough battery voltage to return the aircraft. Set the low battery value (This value is set according to the battery voltage. When you fly long distances, Please set the single cell to 3.8V, the voltage value is $3.8 \times S$, the 3S battery is $3.8 \times 3 = 11.4V$; when at a close distance, you can set 3.6V for each cell), and set the action to RTL (return to home).

2. Set the radio fail safe (throttle fail safe) . Set the action to RTL , and set the fail safe PWM (generally no need to change). Set the fail-safe setting in the transmitter, because we set the fail safe to start after the throttle is lower than 975, so we need to set the throttle fail safe value. Push the throttle trim button in the transmitter and check the input value of channel 3 in the transmitter in fail safe, so that the value is less than 10 or more than 975. Take RadioLink AT9S Pro as an example. Press the Mode button to enter the basic menu and select FAIL SAFE. Press Push to select Channel 3: Throttle. Turn the dial to select F/S and press Push button. When a value appears, the setting is successful. Remember to turn trim button to restore.

When a radio Failsafe is triggered one of the following will happen:

- Nothing if the vehicle is already disarmed.
- Motors will be immediately disarmed if the vehicle is landed OR in stabilize or acro mode and the pilot's throttle is at zero.
- Return-to-Launch (RTL) if the vehicle has a GPS lock and is more than 2 meters from the home position.
- LAND if the vehicle has no GPS lock OR is within 2 meters of home OR the FS_THR_ENABLE parameter is set to "Enabled Always Land" .
- Continue the task if in automatic mode and the failsafe option is Enabled_continue_in_auto_mode.
- If the failsafe is cleared (the throttle is above 975), the aircraft will continue to fly in the flight mode corresponding to the previously set failsafe, and will not automatically return to the previous flight mode of normal flight.

For example: the RTL mode is set for the fail safe, and the aircraft is flying normally in stabilize mode. Suddenly the fail safe is triggered due to signal loss, causing the aircraft's flight mode to automatically change from the stabilize mode to the previously set RTL mode. Even if the transmitter and receiver signals are reconnected during the return journey and the fail safe is released, the aircraft will still fly in the RTL mode. If you need to fly in stabilize mode again, you need to move the flight mode switch to another position and then back to the position of stabilize mode.

1. Set attitude fail safe in the transmitter. **The prerequisite for setting attitude fail safe is that there is a fail safe mode in the flight mode settings.** Taking RadioLink AT9S Pro as an example. Turn on the transmitter, flip the setting switch to RTL mode or the fail-safe mode you want to set, press Mode to enter the MODEL MENU--FAIL SAFE. press Push to select 5: Attitude, Toggle to select F/S, hold Push,

and the numbers below will change. Open Mission Planner to verify it. Turn off the transmitter and check that it is RTL in Mission Planner.

4.2 EKF Fail Safe

FS_EKF_ACTION

Note: This parameter is for advanced users.

Controls the action that will be taken when an EKF failsafe is invoked.

Values	
Value	Meaning
1	Land
2	AltHold
3	Land even in Stabilize

It defaults the value 1, that is the drone will land if lose signal, but you can change the setting from value 1 to value 2, which means the drone will AltHold if lose signal.

FS_EKF_THRESH

Note: This parameter is for advanced users.

Allows setting the maximum acceptable compass and velocity variance.

Values
0.6:Strict, 0.8:Default, 1.0:Relaxed

5. Hardware Setup


Prepare a drone first, a X frame quadcopter as a sample, please mount a CrossRace Pro as below steps after you have assembled the drone.

1. Mount a CrossRace Pro on the center position of the drone, and make sure that the CrossRace Pro is horizontal on the drone.
2. Connect the Mission Planner after download the firmware, calibrate and setup parameters as the steps above.
3. Arm it. If the arm can be done, fly the aircraft after installing the propellers; if arm can be done, find the problem of setting or calibration and solve it.

Note: When calibrating the ESC (first flight), please remove the propellers.

5.1 Install CrossRace Pro on the Aircraft

CrossRace Pro is mounted with fly tower installation method. Install a shock-absorbing rubber sleeve on the mounting hole and insert CrossRace Pro into the fly tower mounting position. Make sure the arrow of the CrossRace Pro is point to the front.

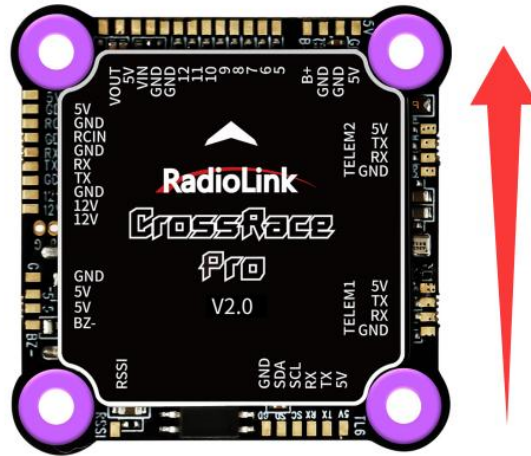

Keep the GPS with the same direction of CrossRace Pro if you need to use CrossRace Pro with GPS.


If the installation can't be done with the default direction, parameters need to be setup according to the installation direction.

AHRS_ORIENTATION


AHRS_ORIENTATION	0	0:None 1:Yaw45 2:Yaw90 3:Yaw135 4:Yaw180 5:Yaw225 6:Yaw270 7:Yaw315 8:Roll0 9:Roll90 10:Yaw45 11:Roll0 12:Yaw90 13:Roll180 14:Yaw135 15:Roll180 16:Roll180 17:Yaw225 18:Roll180 19:Yaw315 20:Roll180 21:Roll0 22:Yaw45 23:Roll0 24:Yaw90 25:Roll90 26:Yaw135 27:Roll90 28:Roll180 29:Yaw180 30:Roll180 31:Roll180 32:Yaw225 33:Roll180 34:Roll180 35:Yaw270 36:Roll180 37:Roll180 38:Yaw315 39:Roll180 40:Roll180 41:Yaw360 42:Roll180 43:Roll180 44:Yaw405 45:Roll180 46:Roll180 47:Yaw450 48:Roll180 49:Roll180 50:Yaw495 51:Roll180 52:Roll180 53:Yaw540 54:Roll180 55:Roll180 56:Yaw585 57:Roll180 58:Roll180 59:Yaw630 60:Roll180 61:Roll180 62:Yaw675 63:Roll180 64:Roll180 65:Yaw720 66:Roll180 67:Roll180 68:Yaw765 69:Roll180 70:Roll180 71:Yaw810 72:Roll180 73:Roll180 74:Yaw855 75:Roll180 76:Roll180 77:Yaw900 78:Roll180 79:Roll180 80:Yaw945 81:Roll180 82:Roll180 83:Yaw990 84:Roll180 85:Roll180 86:Yaw1035 87:Roll180 88:Roll180 89:Yaw1080 90:Roll180 91:Roll180 92:Yaw1125 93:Roll180 94:Roll180 95:Yaw1170 96:Roll180 97:Roll180 98:Yaw1215 99:Roll180 100:Roll180 101:Yaw1260 102:Roll180 103:Roll180 104:Yaw1305 105:Roll180 106:Roll180 107:Yaw1350 108:Roll180 109:Roll180 110:Yaw1395 111:Roll180 112:Roll180 113:Yaw1440 114:Roll180 115:Roll180 116:Yaw1485 117:Roll180 118:Roll180 119:Yaw1530 120:Roll180 121:Roll180 122:Yaw1575 123:Roll180 124:Roll180 125:Yaw1620 126:Roll180 127:Roll180 128:Yaw1665 129:Roll180 130:Roll180 131:Yaw1710 132:Roll180 133:Roll180 134:Yaw1755 135:Roll180 136:Roll180 137:Yaw1800 138:Roll180 139:Roll180 140:Yaw1845 141:Roll180 142:Roll180 143:Yaw1890 144:Roll180 145:Roll180 146:Yaw1935 147:Roll180 148:Roll180 149:Yaw1980 150:Roll180 151:Roll180 152:Yaw2025 153:Roll180 154:Roll180 155:Yaw2070 156:Roll180 157:Roll180 158:Yaw2115 159:Roll180 160:Roll180 161:Yaw2160 162:Roll180 163:Roll180 164:Yaw2205 165:Roll180 166:Roll180 167:Yaw2250 168:Roll180 169:Roll180 170:Yaw2295 171:Roll180 172:Roll180 173:Yaw2340 174:Roll180 175:Roll180 176:Yaw2385 177:Roll180 178:Roll180 179:Yaw2430 180:Roll180 181:Roll180 182:Yaw2475 183:Roll180 184:Roll180 185:Yaw2520 186:Roll180 187:Roll180 188:Yaw2565 189:Roll180 190:Roll180 191:Yaw2610 192:Roll180 193:Roll180 194:Yaw2655 195:Roll180 196:Roll180 197:Yaw2700 198:Roll180 199:Roll180 200:Yaw2745 201:Roll180 202:Roll180 203:Yaw2790 204:Roll180 205:Roll180 206:Yaw2835 207:Roll180 208:Roll180 209:Yaw2880 210:Roll180 211:Roll180 212:Yaw2925 213:Roll180 214:Roll180 215:Yaw2970 216:Roll180 217:Roll180 218:Yaw3015 219:Roll180 220:Roll180 221:Yaw3060 222:Roll180 223:Roll180 224:Yaw3105 225:Roll180 226:Roll180 227:Yaw3150 228:Roll180 229:Roll180 230:Yaw3195 231:Roll180 232:Roll180 233:Yaw3240 234:Roll180 235:Roll180 236:Yaw3285 237:Roll180 238:Roll180 239:Yaw3330 240:Roll180 241:Roll180 242:Yaw3375 243:Roll180 244:Roll180 245:Yaw3420 246:Roll180 247:Roll180 248:Yaw3465 249:Roll180 250:Roll180 251:Yaw3510 252:Roll180 253:Roll180 254:Yaw3555 255:Roll180 256:Roll180 257:Yaw3600 258:Roll180 259:Roll180 260:Yaw3645 261:Roll180 262:Roll180 263:Yaw3690 264:Roll180 265:Roll180 266:Yaw3735 267:Roll180 268:Roll180 269:Yaw3780 270:Roll180 271:Roll180 272:Yaw3825 273:Roll180 274:Roll180 275:Yaw3870 276:Roll180 277:Roll180 278:Yaw3915 279:Roll180 280:Roll180 281:Yaw3960 282:Roll180 283:Roll180 284:Yaw4005 285:Roll180 286:Roll180 287:Yaw4050 288:Roll180 289:Roll180 290:Yaw4095 291:Roll180 292:Roll180 293:Yaw4140 294:Roll180 295:Roll180 296:Yaw4185 297:Roll180 298:Roll180 299:Yaw4230 300:Roll180 301:Roll180 302:Yaw4275 303:Roll180 304:Roll180 305:Yaw4320 306:Roll180 307:Roll180 308:Yaw4365 309:Roll180 310:Roll180 311:Yaw4410 312:Roll180 313:Roll180 314:Yaw4455 315:Roll180 316:Roll180 317:Yaw4500 318:Roll180 319:Roll180 320:Yaw4545 321:Roll180 322:Roll180 323:Yaw4590 324:Roll180 325:Roll180 326:Yaw4635 327:Roll180 328:Roll180 329:Yaw4680 330:Roll180 331:Roll180 332:Yaw4725 333:Roll180 334:Roll180 335:Yaw4770 336:Roll180 337:Roll180 338:Yaw4815 339:Roll180 340:Roll180 341:Yaw4860 342:Roll180 343:Roll180 344:Yaw4905 345:Roll180 346:Roll180 347:Yaw4950 348:Roll180 349:Roll180 350:Yaw4995 351:Roll180 352:Roll180 353:Yaw5040 354:Roll180 355:Roll180 356:Yaw5085 357:Roll180 358:Roll180 359:Yaw5130 360:Roll180 361:Roll180 362:Yaw5175 363:Roll180 364:Roll180 365:Yaw5220 366:Roll180 367:Roll180 368:Yaw5265 369:Roll180 370:Roll180 371:Yaw5310 372:Roll180 373:Roll180 374:Yaw5355 375:Roll180 376:Roll180 377:Yaw5400 378:Roll180 379:Roll180 380:Yaw5445 381:Roll180 382:Roll180 383:Yaw5490 384:Roll180 385:Roll180 386:Yaw5535 387:Roll180 388:Roll180 389:Yaw5580 390:Roll180 391:Roll180 392:Yaw5625 393:Roll180 394:Roll180 395:Yaw5670 396:Roll180 397:Roll180 398:Yaw5715 399:Roll180 400:Roll180 401:Yaw5760 402:Roll180 403:Roll180 404:Yaw5805 405:Roll180 406:Roll180 407:Yaw5850 408:Roll180 409:Roll180 410:Yaw5895 411:Roll180 412:Roll180 413:Yaw5940 414:Roll180 415:Roll180 416:Yaw5985 417:Roll180 418:Roll180 419:Yaw6030 420:Roll180 421:Roll180 422:Yaw6075 423:Roll180 424:Roll180 425:Yaw6120 426:Roll180 427:Roll180 428:Yaw6165 429:Roll180 430:Roll180 431:Yaw6210 432:Roll180 433:Roll180 434:Yaw6255 435:Roll180 436:Roll180 437:Yaw6300 438:Roll180 439:Roll180 440:Yaw6345 441:Roll180 442:Roll180 443:Yaw6390 444:Roll180 445:Roll180 446:Yaw6435 447:Roll180 448:Roll180 449:Yaw6480 450:Roll180 451:Roll180 452:Yaw6525 453:Roll180 454:Roll180 455:Yaw6570 456:Roll180 457:Roll180 458:Yaw6615 459:Roll180 460:Roll180 461:Yaw6660 462:Roll180 463:Roll180 464:Yaw6705 465:Roll180 466:Roll180 467:Yaw6750 468:Roll180 469:Roll180 470:Yaw6795 471:Roll180 472:Roll180 473:Yaw6840 474:Roll180 475:Roll180 476:Yaw6885 477:Roll180 478:Roll180 479:Yaw6930 480:Roll180 481:Roll180 482:Yaw6975 483:Roll180 484:Roll180 485:Yaw7020 486:Roll180 487:Roll180 488:Yaw7065 489:Roll180 490:Roll180 491:Yaw7110 492:Roll180 493:Roll180 494:Yaw7155 495:Roll180 496:Roll180 497:Yaw7200 498:Roll180 499:Roll180 500:Yaw7245 501:Roll180 502:Roll180 503:Yaw7290 504:Roll180 505:Roll180 506:Yaw7335 507:Roll180 508:Roll180 509:Yaw7380 510:Roll180 511:Roll180 512:Yaw7425 513:Roll180 514:Roll180 515:Yaw7470 516:Roll180 517:Roll180 518:Yaw7515 519:Roll180 520:Roll180 521:Yaw7560 522:Roll180 523:Roll180 524:Yaw7605 525:Roll180 526:Roll180 527:Yaw7650 528:Roll180 529:Roll180 530:Yaw7695 531:Roll180 532:Roll180 533:Yaw7740 534:Roll180 535:Roll180 536:Yaw7785 537:Roll180 538:Roll180 539:Yaw7830 540:Roll180 541:Roll180 542:Yaw7875 543:Roll180 544:Roll180 545:Yaw7920 546:Roll180 547:Roll180 548:Yaw7965 549:Roll180 550:Roll180 551:Yaw8010 552:Roll180 553:Roll180 554:Yaw8055 555:Roll180 556:Roll180 557:Yaw8100 558:Roll180 559:Roll180 560:Yaw8145 561:Roll180 562:Roll180 563:Yaw8190 564:Roll180 565:Roll180 566:Yaw8235 567:Roll180 568:Roll180 569:Yaw8280 570:Roll180 571:Roll180 572:Yaw8325 573:Roll180 574:Roll180 575:Yaw8370 576:Roll180 577:Roll180 578:Yaw8415 579:Roll180 580:Roll180 581:Yaw8460 582:Roll180 583:Roll180 584:Yaw8505 585:Roll180 586:Roll180 587:Yaw8550 588:Roll180 589:Roll180 590:Yaw8595 591:Roll180 592:Roll180 593:Yaw8640 594:Roll180 595:Roll180 596:Yaw8685 597:Roll180 598:Roll180 599:Yaw8730 600:Roll180 601:Roll180 602:Yaw8775 603:Roll180 604:Roll180 605:Yaw8820 606:Roll180 607:Roll180 608:Yaw8865 609:Roll180 610:Roll180 611:Yaw8910 612:Roll180 613:Roll180 614:Yaw8955 615:Roll180 616:Roll180 617:Yaw9000 618:Roll180 619:Roll180 620:Yaw9045 621:Roll180 622:Roll180 623:Yaw9090 624:Roll180 625:Roll180 626:Yaw9135 627:Roll180 628:Roll180 629:Yaw9180 630:Roll180 631:Roll180 632:Yaw9225 633:Roll180 634:Roll180 635:Yaw9270 636:Roll180 637:Roll180 638:Yaw9315 639:Roll180 640:Roll180 641:Yaw9360 642:Roll180 643:Roll180 644:Yaw9405 645:Roll180 646:Roll180 647:Yaw9450 648:Roll180 649:Roll180 650:Yaw9495 651:Roll180 652:Roll180 653:Yaw9540 654:Roll180 655:Roll180 656:Yaw9585 657:Roll180 658:Roll180 659:Yaw9630 660:Roll180 661:Roll180 662:Yaw9675 663:Roll180 664:Roll180 665:Yaw9720 666:Roll180 667:Roll180 668:Yaw9765 669:Roll180 670:Roll180 671:Yaw9810 672:Roll180 673:Roll180 674:Yaw9855 675:Roll180 676:Roll180 677:Yaw9900 678:Roll180 679:Roll180 680:Yaw9945 681:Roll180 682:Roll180 683:Yaw9990 684:Roll180 685:Roll180 686:Yaw10035 687:Roll180 688:Roll180 689:Yaw10080 690:Roll180 691:Roll180 692:Yaw10125 693:Roll180 694:Roll180 695:Yaw10170 696:Roll180 697:Roll180 698:Yaw10215 699:Roll180 700:Roll180 701:Yaw10260 702:Roll180 703:Roll180 704:Yaw10305 705:Roll180 706:Roll180 707:Yaw10350 708:Roll180 709:Roll180 710:Yaw10395 711:Roll180 712:Roll180 713:Yaw10440 714:Roll180 715:Roll180 716:Yaw10485 717:Roll180 718:Roll180 719:Yaw10530 720:Roll180 721:Roll180 722:Yaw10575 723:Roll180 724:Roll180 725:Yaw10620 726:Roll180 727:Roll180 728:Yaw10665 729:Roll180 730:Roll180 731:Yaw10710 732:Roll180 733:Roll180 734:Yaw10755 735:Roll180 736:Roll180 737:Yaw10800 738:Roll180 739:Roll180 740:Yaw10845 741:Roll180 742:Roll180 743:Yaw10890 744:Roll180 745:Roll180 746:Yaw10935 747:Roll180 748:Roll180 749:Yaw10980 750:Roll180 751:Roll180 752:Yaw11025 753:Roll180 754:Roll180 755:Yaw11070 756:Roll180 757:Roll180 758:Yaw11115 759:Roll180 760:Roll180 761:Yaw11160 762:Roll180 763:Roll180 764:Yaw11205 765:Roll180 766:Roll180 767:Yaw11250 768:Roll180 769:Roll180 770:Yaw11295 771:Roll180 772:Roll180 773:Yaw11340 774:Roll180 775:Roll180 776:Yaw11385 777:Roll180 778:Roll180 779:Yaw11430 780:Roll180 781:Roll180 782:Yaw11475 783:Roll180 784:Roll180 785:Yaw11520 786:Roll180 787:Roll180 788:Yaw11565 789:Roll180 790:Roll180 791:Yaw11610 792:Roll180 793:Roll180 794:Yaw11655 795:Roll180 796:Roll180 797:Yaw11700 798:Roll180 799:Roll180 800:Yaw11745 801:Roll180 802:Roll180 803:Yaw11790 804:Roll180 805:Roll180 806:Yaw11835 807:Roll180 808:Roll180 809:Yaw11880 810:Roll180 811:Roll180 812:Yaw11925 813:Roll180 814:Roll180 815:Yaw11970 816:Roll180 817:Roll180 818:Yaw12015 819:Roll180 820:Roll180 821:Yaw12060 822:Roll180 823:Roll180 824:Yaw12105 825:Roll180 826:Roll180 827:Yaw12150 828:Roll180 829:Roll180 830:Yaw12195 831:Roll180 832:Roll180 833:Yaw12240 834:Roll180 835:Roll180 836:Yaw12285 837:Roll180 838:Roll180 839:Yaw12330 840:Roll180 841:Roll180 842:Yaw12375 843:Roll180 844:Roll180 845:Yaw12420 846:Roll180 847:Roll180 848:Yaw12465 849:Roll180 850:Roll180 851:Yaw12510 852:Roll180 853:Roll180 854:Yaw12555 855:Roll180 856:Roll180 857:Yaw12600 858:Roll180 859:Roll180 860:Yaw12645 861:Roll180 862:Roll180 863:Yaw12690 864:Roll180 865:Roll180 866:Yaw12735 867:Roll180 868:Roll180 869:Yaw12780 870:Roll180 871:Roll180 872:Yaw12825 873:Roll180 874:Roll180 875:Yaw12870 876:Roll180 877:Roll180 878:Yaw12915 879:Roll180 880:Roll180 881:Yaw12960 882:Roll180 883:Roll180 884:Yaw13005 885:Roll180 886:Roll180 887:Yaw13050 888:Roll180 889:Roll180 890:Yaw13095 891:Roll180 892:Roll180 893:Yaw13140 894:Roll180 895:Roll180 896:Yaw13185 897:Roll180 898:Roll180 899:Yaw13230 900:Roll180 901:Roll180 902:Yaw13275 903:Roll180 904:Roll180 905:Yaw13320 906:Roll180 907:Roll180 908:Yaw13365 909:Roll180 910:Roll180 911:Yaw13410 912:Roll180 913:Roll180 914:Yaw13455 915:Roll180 916:Roll180 917:Yaw13500 918:Roll180 919:Roll180 920:Yaw13545 921:Roll180 922:Roll180 923:Yaw13590 924:Roll180 925:Roll180 926:Yaw13635 927:Roll180 928:Roll180 929:Yaw13680 930:Roll180 931:Roll180 932:Yaw13725 933:Roll180 934:Roll180 935:Yaw13770 936:Roll180 937:Roll180 938:Yaw13815 939:Roll180 940:Roll180 941:Yaw13860 942:Roll180 943:Roll180 944:Yaw13905 945:Roll180 946:Roll180 947:Yaw13950 948:Roll180 949:Roll180 950:Yaw13995 951:Roll180 952:Roll180 953:Yaw14040 954:Roll180 955:Roll180 956:Yaw14085 957:Roll180 958:Roll180 959:Yaw14130 960:Roll180 961:Roll180 962:Yaw14175 963:Roll180 964:Roll180 965:Yaw14220 966:Roll180 967:Roll180 968:Yaw14265 969:Roll180 970:Roll180 971:Yaw14310 972:Roll180 973:Roll180 974:Yaw14355 975:Roll180 976:Roll180 977:Yaw14400 978:Roll180 979:Roll180 980:Yaw14445 981:Roll180 982:Roll180 983:Yaw14490 984:Roll180 985:Roll180 986:Yaw14535 987:Roll180 988:Roll180 989:Yaw14580 990:Roll180 991:Roll180 992:Yaw14625 993:Roll180 994:Roll180 995:Yaw14670 996:Roll180 997:Roll180 998:Yaw14715 999:Roll180 1000:Roll180 1001:Yaw14760 1002:Roll180 1003:Roll180 1004:Yaw14805 1005:Roll180 1006:Roll180 1007:Yaw14850 1008:Roll180 1009:Roll180 1010:Yaw14895 1011:Roll180 1012:Roll180 1013:Yaw14940 1014:Roll180 1015:Roll180 1016:Yaw14985 1017:Roll180 1018:Roll180 1019:Yaw15030 1020:Roll180 1021:Roll180 1022:Yaw15075 1023:Roll180 1024:Roll180 1025:Yaw15120 1026:Roll180 1027:Roll180 1028:Yaw15165 1029:Roll180 1030:Roll180 1031:Yaw15210 1032:Roll180 1033:Roll180 1034:Yaw15255 1035:Roll180 1036:Roll180 1037:Yaw15300 1038:Roll180 1039:Roll180 1040:Yaw15345 1041:Roll180 1042:Roll180 1043:Yaw15390 1044:Roll180 1045:Roll180 1046:Yaw15435 1047:Roll180 1048:Roll180 1049:Yaw15480 1050:Roll180 1051:Roll180 1052:Yaw15525 1053:Roll180 1054:Roll180 1055:Yaw15570 1056:Roll180 1057:Roll180 1058:Yaw15615 1059:Roll180 1060:Roll180 1061:Yaw15660 1062:Roll180 1063:Roll180 1064:Yaw15705 1065:Roll180 1066:Roll180 1067:Yaw15750 1068:Roll180 1069:Roll180 1070:Yaw15795 1071:Roll180 1072:Roll180 1073:Yaw15840 1074:Roll180 1075:Roll180 1076:Yaw15885 1077:Roll180 1078:Roll180 1079:Yaw15930 1080:Roll180 1081:Roll180 1082:Yaw15975 1083:Roll180 1084:Roll180 1085:Yaw16020 1086:Roll180 1087:Roll180 1088:Yaw16065 1089:Roll180 1090:Roll180 1091:Yaw16110 1092:Roll180 1093:Roll180 1094:Yaw16155 1095:Roll180 1096:Roll180 1097:Yaw16200 1098:Roll180 1099:Roll180 1100:Yaw16245 1101:Roll180 1102:Roll180 1103:Yaw16290 1104:Roll180 1105:Roll180 1106:Yaw16335 1107:Roll180 1108:Roll180 1109:Yaw16380 1110:Roll180 1111:Roll180 1112:Yaw16425 1113:Roll180 1114:Roll180 1115:Yaw16470 1116:Roll180 1117:Roll180 1118:Yaw16515 1119:Roll180 1120:Roll180
------------------	---	--

Legend for motor-order diagrams


Quadcopters

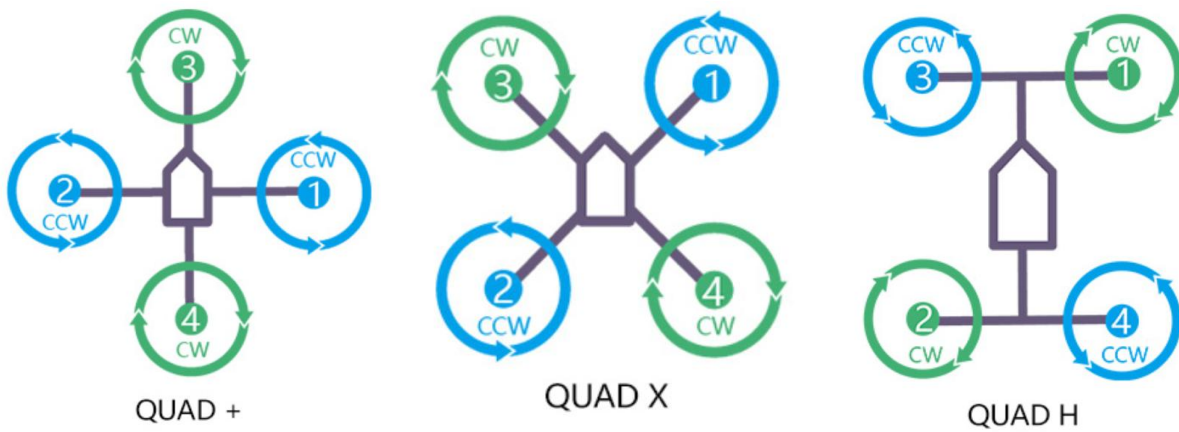

Note: When the rack type is BetaFlightX/BetaFlightXReversed, the motor sequence is as follows:

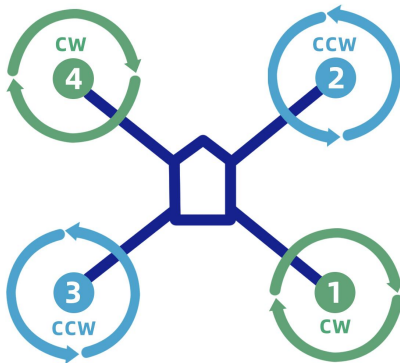

Hexacopter

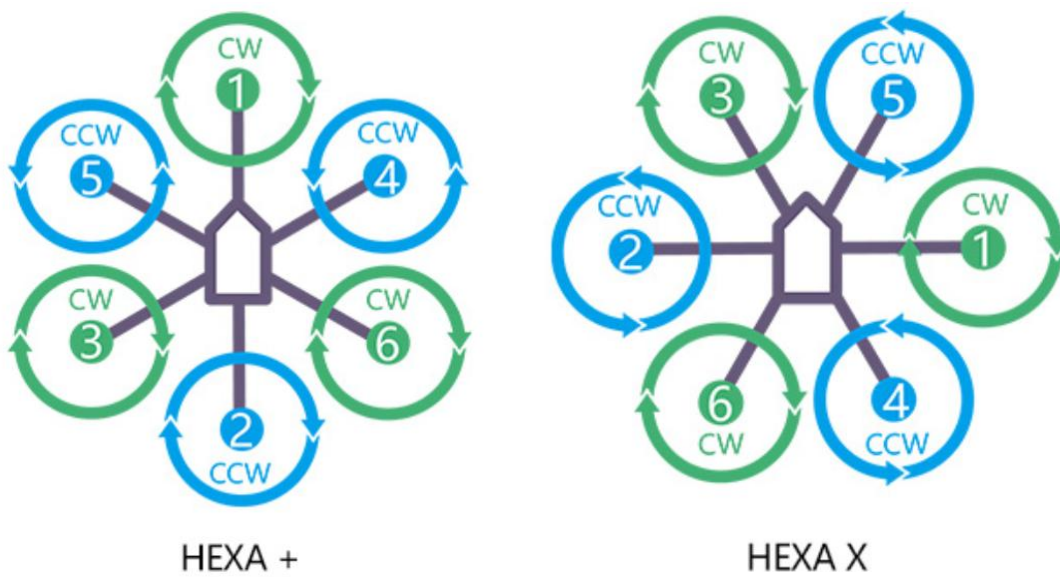

Octocopter




OCTO +




OCTO X

Y6

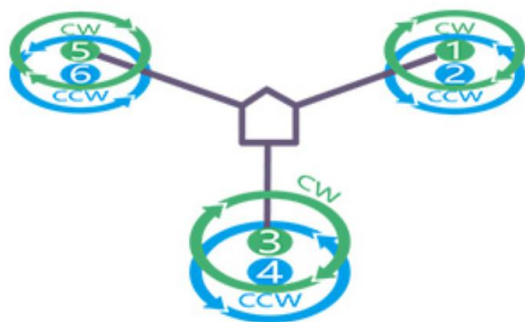


New Y6
Y6B

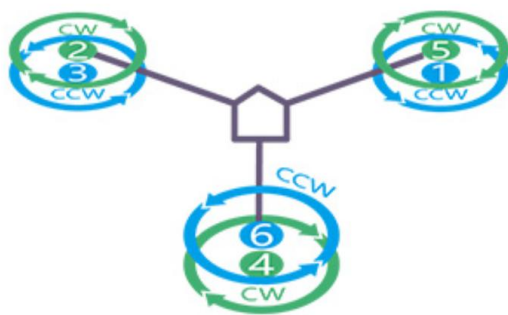


Old Y6
Y6A

X8

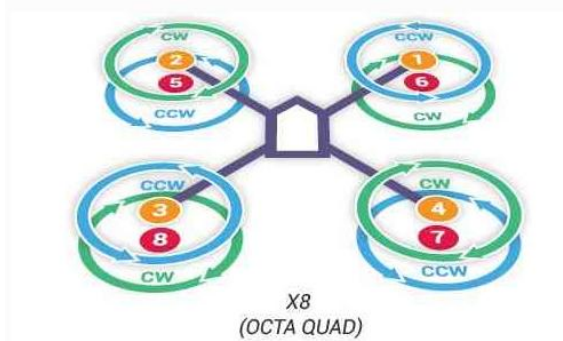

X8
(OCTA QUAD)


Tricopter

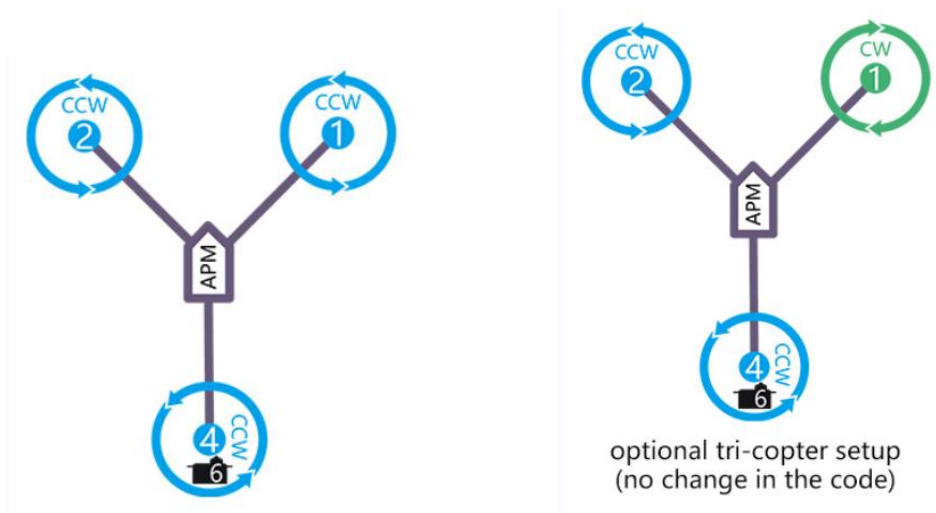

Note Since there' s no voltage output from the flight controller, an extra BEC module needs to be connected to power supply servo for this model frame .

5.2.2 How to Recognize Clockwise and Counterclockwise Propellers

There are clockwise propellers and counterclockwise propellers. The high side of the propeller points in the direction of rotation. The propeller that rotate clockwise are CW propellers, and the propeller that rotate counterclockwise are CCW propellers.

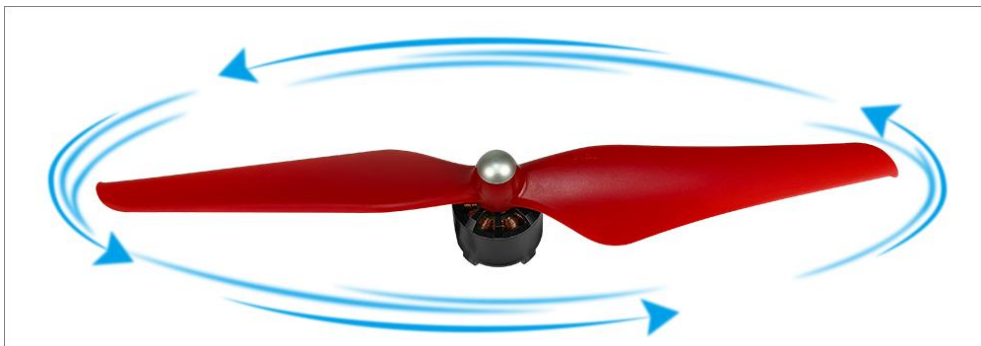

CCW propellers (counterclockwise rotation)



CW propellers (clockwise rotation)

5.2.3 Connect the Spare Parts

Receiver installation:

CrossRace Pro supports receivers with SBUS/PPM signal and serial port receivers.

Using receivers with SBUS/PPM signal.

There are two ways to connect the receiver.


1. Use the included 3pin cable to connect to the RCIN interface of the flight controller, and plug the other end into the receiver.
2. You can also choose to weld the SBUS/PPM signal line of the receiver to the RCIN pad of the flight controller.

Using serial port receiver (ERLS, Black Sheep 915 receiver, etc.).

There are also two ways to connect the serial port receiver.

1. Use the included 4-pin cable to connect to the telem1 or telem2 interface of the flight controller, and connect the other end to the receiver. Note that the RX port on the flight controller is connected to the TX port of the receiver, and the RX on the flight control section is connected to the TX port of the receiver. The TX port on the flight controller is connected to the RX port of the receiver.
2. You can also weld the receiver to the flight controller. The corresponding pads are drawn from the back of the interfaces of telem1 and telem2, and you can just solder them directly.

After the connection, enter Mission Planner. Search for SERIALx_PROTOCOL in Full parameter List (x depends on the selected serial port number. If serial port 1 is selected, search for SERIAL1_PROTOCOL), change the value to 23 (RCIN). Save the parameter and restart the flight controller.

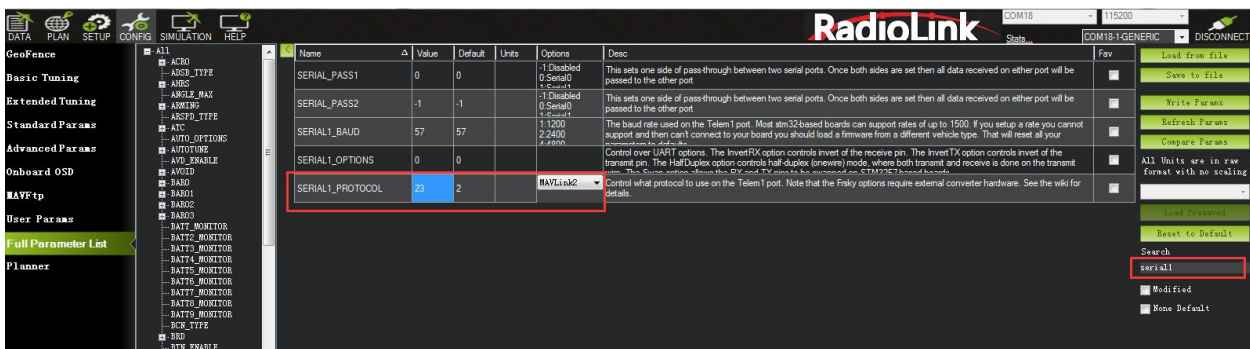

Buzzer installation:

Directly solder the negative electrode of the buzzer to the BZ- pad and the positive electrode to the 5V pad.

Image transmission installation:

Use analog image transmission:

When using analog image transmission, you only need to connect the video output of the camera to the VIN port of the flight controller, and VOUT to the image transmission. No need to set the parameters.

Use digital image transmission:

CrossRace Pro supports many digital image transmission such as DJI O3 air unit, DJI VISTA air unit, Walksnail AVATAR air unit, etc.

When using the DJI VISTA air unit, connect it directly to the digital image transmission port, and modify the following configuration in Mission Planner:

- 1: Search for SERIAL4_PROTOCOL in in Full Parameter List and change the parameters to 33 (DJI FPV).
- 2: Search for OSD_TYPE in Full Parameter List and change the parameter to 3 (MSP).
- 3: Save and restart flight controller.

Note: If your VISTA has been upgraded to the latest firmware (Firmware version V01.01.0000 and above) to be compatible with DJI G2 glasses, follow the settings of the O3 air unit.

When using the DJI O3 air unit, connect it directly to the digital image transmission port, and modify the following configuration in Mission Planner:

- 1: Search for SERIAL4_PROTOCOL in Full Parameter List and change the parameter to 42(DISPLAYPORT).
- 2: Search for OSD_TYPE in Full Parameter List and change the parameter to 5 (MPS_DISPLAYPORT).
- 3: Save and restart flight controller.


When using the Walksnail AVATAR air unit, connect the interface to the last 4 pins of the digital image serial port (12v G TX RX), and modify the following configuration on the Mission Planner:

- 1: Search for SERIAL4_PROTOCOL in Full Parameter List and change the parameter to 42(DISPLAYPORT).
- 2: Search for OSD_TYPE in Full Parameter List and change the parameter to 5 (MPS_DISPLAYPORT).
- 3: Save and restart flight controller.

The screenshot shows the Mission Planner interface. At the top, the 'SERIAL4_PROTOCOL' parameter is set to 42. Below it, a dropdown menu is open, showing a list of protocols. 'DisplayPort' is highlighted with a red box. To the right, a search bar contains 'serial4', and a 'Modified' checkbox is checked. Below the parameter list, the 'OSD_TYPE' parameter is set to 5. A dropdown menu for 'OSD type' is open, showing options like 'None', 'MAX7456', 'SITL', 'MSP', 'TXONLY', and 'MSP_DISPLAYPORT'. 'MSP_DISPLAYPORT' is highlighted with a red box. The bottom of the screen shows a table with columns: Name, Value, Default, Units, Options, Desc, and Fav. The 'OSD_TYPE' row is highlighted.

Name	Value	Default	Units	Options	Desc	Fav
OSD_TYPE	5	1		MSP_DISPLAYPORT	OSD type. TXONLY makes the OSD parameter selection available to other modules even if there is no native OSD support on the board, for instance CRSF.	

Battery Monitor Setup

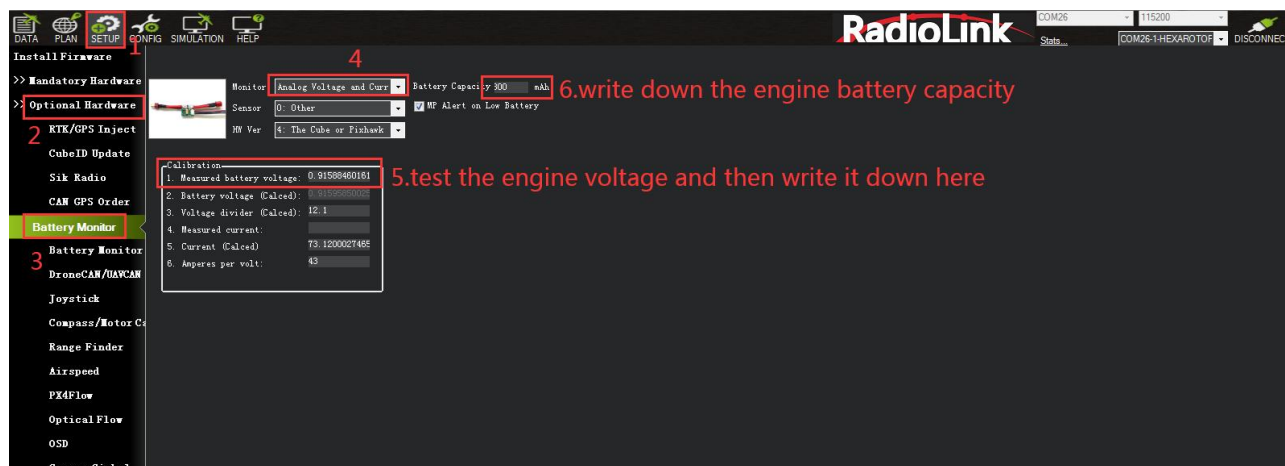

Mission Planner Setup

Battery measurement is primarily set up in the *Mission Planner* 's **INITIAL SETUP -- Optional Hardware -- Battery Monitor** screen.

Enter the properties your module can measure, the type of module, the type of flight controller, and the battery capacity:

Monitor: Voltage and Current or Battery Volts.

Sensor: Supported power module, or "Other" .

APM ver: Flight controller (e.g. Pixhawk).

Battery Capacity: Battery capacity in mAh.

When the setting is turned on, please disconnect the flight controller, power on the flight controller again, then open this interface and enter the measured battery voltage. When the voltage that appears in the 2 battery voltage (calculated) box is the same as the entered measurement value and no longer jumps, it means the setting is normal.

Note: When the setting is inaccurate, it may be impossible to arm, or the buzzer may beep quickly after arming. This means that the power supply is not set incorrectly. Please set it correctly again. If there is a continuous fail safe situation, it is possible that the battery low-voltage fail safe is turned on and the battery monitoring is inaccurate.

5.3 LED Indicator, Arming and Troubleshooting

5.3.1 LED Indicator

	Blue and red flashing: Initializing
	Yellow flashing twice: Error, Arming rejected
	Blue flashing: Stabilize, can be armed. Failure to RTL or PosHold
	Green flashing: GPS locked, can be armed and take off, RTL
	Green always on + a long D sound: Armed and ready to take off
	Yellow flashing: Transmitter failsafe activated
	Yellow flashing+repeated sounds: Battery failsafe activated
	Yellow flashing+High/High/Low sounds: GPS data error or GPS failsafe activated

5.3.2 Arming and Disarming

When your the LED of the flight controller is blue or green, you can arm it. When the LED is yellow, you can also perform arming and check the cause of the fault.

Arm action:


1. Use the left joystick to perform the arm action shown below (The stick mode is mode 2):



2. Hold it for 5 seconds;
3. When you hear the buzzer beeping for a long time and the flight controller indicator light is always on, the arming is successful.


Note:

1. When the stick mode of the transmitter is not mode 2, please make sure Channel 3 is at the lowest and channel 4 is at the highest to perform arming. You can check the action in Mission Planner.

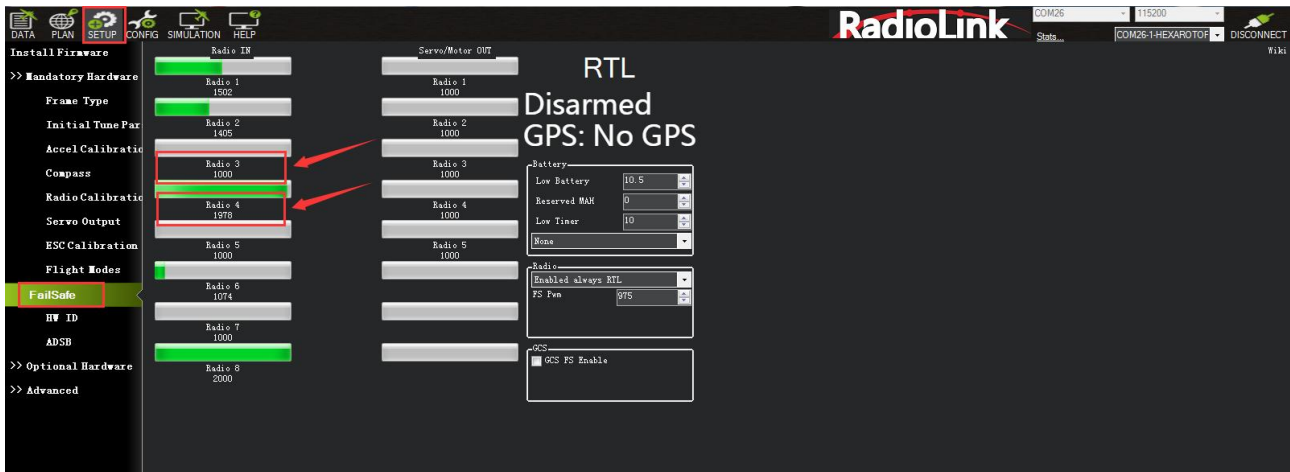

In the above picture, Channel 3 is at the lowest and channel 4 is at the highest.

2. If the buzzer beeps when the arming action is performed, the arming fails. Please connect the flight controller to Mission Planner to check the disarm prompt, and solve the fault according to the fault instructions in the next chapter.
3. If there is a PreArm failure of "compass not healthy" when CrossRace Pro is not connected to a compass, it means that Use compass is checked in the compass setting. Please Enter SETUP--Mandatory Hardware-- Compass, and uncheck the box in front of Use compass1 2 3.

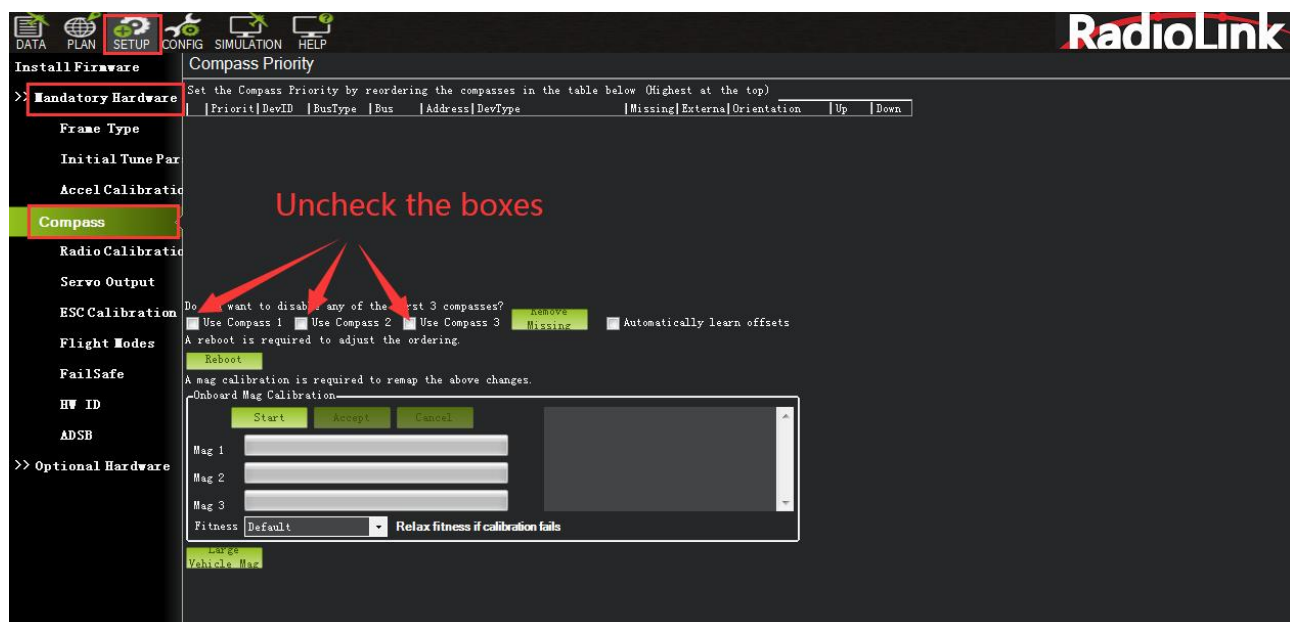

Disarm action:

Hold the left joystick to perform the arm action shown below for 5 seconds. (The stick mode is mode 2). When the LED of flight controller flashes and propellers stop rotating, the disarming is successful.



Note:


1. When the stick mode of the transmitter is not mode 2, please make sure Channel 3 is at the lowest and channel 4 is at the lowest to perform disarming.
2. In GPS-assisted mode such as Alt-Hold mode, PosHold mode and Loiter mode, please wait for the propeller to stop before performing the disarming action, otherwise the aircraft may flip over.

5.3.3 Turn off Spinning when Armed

If you connect the battery and armed, the motors begin to have speed even though the throttle is at zero. It reminds you that CrossRace Pro is in service and please take care of the safety. This function is very importance for the safety but if you do not want use this function, you can turn off it.

How to turn off this function:

Setup the number of Spin when Armed from 0.100 to 0.000 as the picture below.

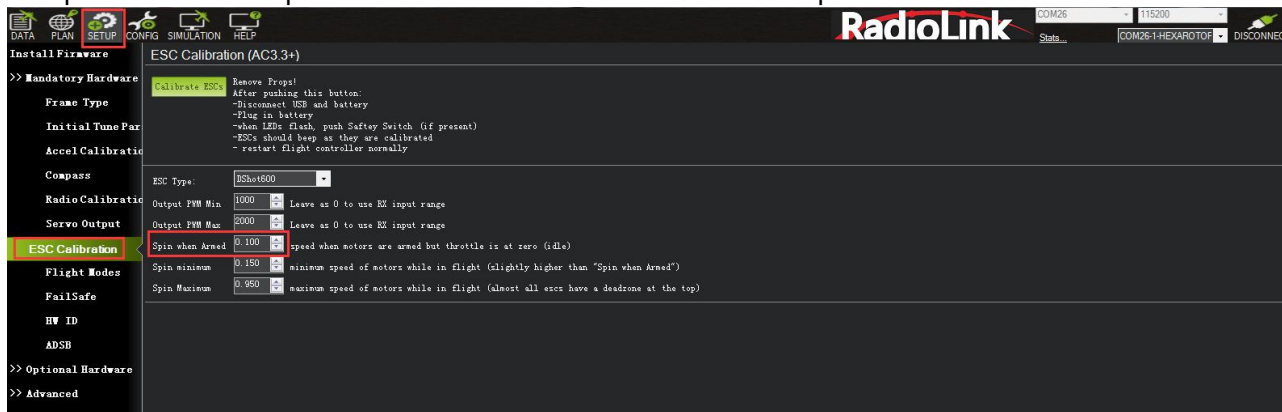

5.3.4 Troubleshooting for Arm Failure


Pre-Arm Safety Checks:

1. Radio calibrated
2. Accelerometers calibrated
3. Compass healthy
4. Compass offsets
5. Compass calibrated
6. Compass Field length
7. Barometer healthy
8. Geofencing & GPS lock
9. Board Voltage

For more details of Pre-arm safety check, please refer to the link:

<https://ardupilot.org/copter/docs/common-prearm-safety-checks.html>

When the arming fails, the flight controller LED indicator flashes yellow, perform arming action, and the buzzer prompts. Connect the flight controller to Mission Planner to view the fault prompt. After connecting, view the following interface:

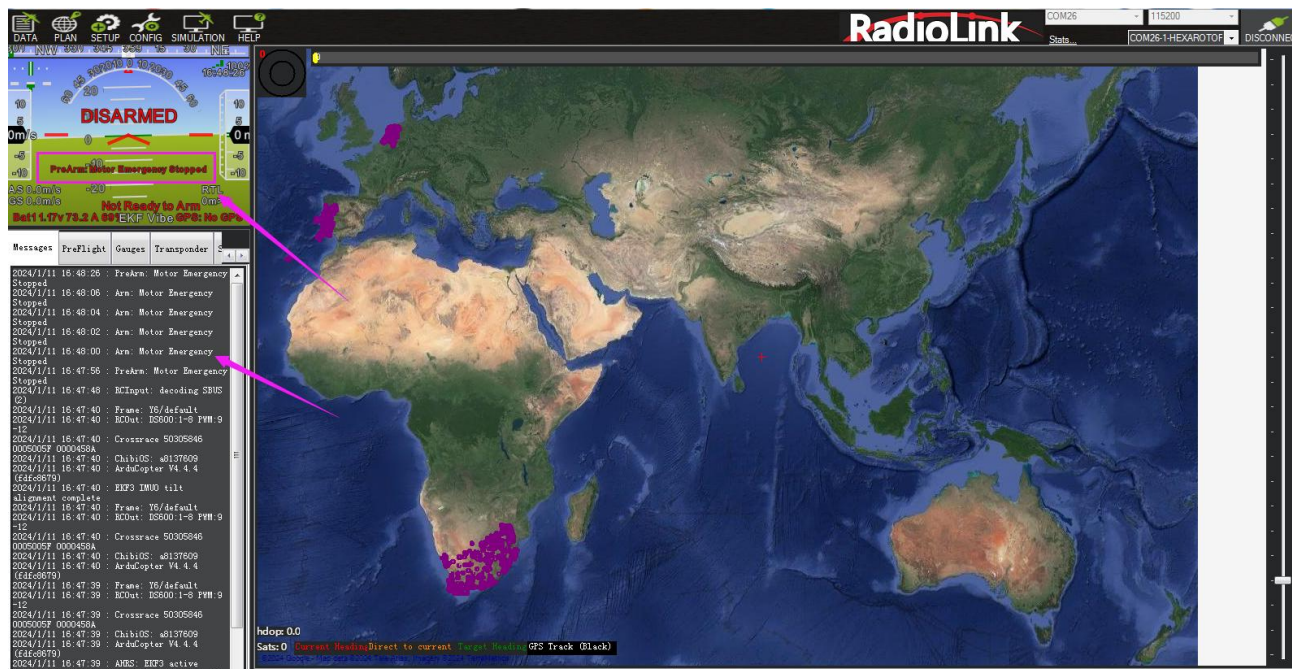

When a prompt starting with PreArm appears in red font, this represents the cause of the fault at this time. For details, you can check the translation and comparison of the prompts below to solve them; When there is no red font displayed, you can perform the arming action, which will be displayed, or view the top line of text in the message bar; After solving the fault, power on the flight controller again. After the flight control starts normally, the status indicator light will turn blue and flash, which means it can be armed;

Some failure messages:

safe switch: The safety switch is not closed. Check the value of BRD_SAFETYENABLE in all parameter list. If it is 1, modify it to 0.

RC not calibrated: the radio calibration has not been performed. RC3_MIN and RC3_MAX must have been changed from their default values (1100 and 1900), and for channels 1 to 4, MIN value must be 1300 or less, and MAX value 1700 or more.

Barometer failures:

Baro not healthy: the barometer sensor is reporting that it is unhealthy which is normally a sign of a hardware failure.

Alt disparity: the barometer altitude disagrees with the inertial navigation (i.e. Baro + Accelerometer) altitude estimate by more than 2 meters. This message is normally short-lived and can occur when the flight controller is first plugged in or if it receives a hard jolt (i.e. dropped suddenly). If it does not clear the accelerometers may need to be calibrated or there may be a barometer hardware issue.

Compass failures:

Compass not healthy: the compass sensor is reporting that it is unhealthy which is a sign of a hardware failure.

Compass not calibrated : the compass(es) has not been calibrated. the COMPASS_OFS_X, Y, Z parameters are zero or the number or type of compasses connected has been changed since the last compass calibration was performed.

Compass offsets too high: the primary compass' s offsets length (i.e. $\sqrt{x^2+y^2+z^2}$) are larger than 500. This can be caused by metal objects being placed too close to the compass. If only an internal compass is being used (not recommended), it may simply be the metal in the board that is causing the large offsets and this may not actually be a problem in which case you may wish to disable the compass check.

Check mag field: the sensed magnetic field in the area is 35% higher or lower than the expected value. The expected length is 530 so it' s > 874 or < 185 . Magnetic field strength varies around the world but these wide limits mean it' s more likely the compass calibration has not calculated good offsets and should be repeated.

Compasses inconsistent: the internal and external compasses are pointing in different directions (off by >45 degrees). This is normally caused by the external compasses orientation (i.e. COMPASS_ORIENT parameter) being set incorrectly.

GPS related failures:

GPS Glitch : the GPS is glitching and the vehicle is in a flight mode that requires GPS (i.e. Loiter, PosHold, etc) and/or the circular fence is enabled.

Need 3D Fix : the GPS does not have a 3D fix and the vehicle is in a flight mode that requires the GPS and/or the circular fence is enabled.

Bad Velocity: the vehicle' s velocity (according to inertial navigation system) is above 50cm/s. Issues that could lead to this include the vehicle actually moving or being dropped, bad accelerometer calibration, GPS updating at below the expected 5hz.

High GPS HDOP : the GPS' s HDOP value (a measure of the position accuracy) is above 2.0 and the vehicle is in a flight mode that requires GPS and/or the circular fence is enabled. This may be resolved by simply waiting a few minutes, moving to a location with a better view of the sky or checking sources of GPS interference (i.e. FPV equipment) are moved further from the GPS. Alternatively, the check can be relaxed by increasing the GPS_HDOP_GOOD parameter to 2.2 or 2.5. Worst case the pilot may disable the fence and take-off in a mode that does not require the GPS (i.e. Stabilize, AltHold) and switch into Loiter after arming but this is not recommended.

Note: the GPS HDOP can be readily viewed through the Mission Planner' s Quick tab as shown below.

INS checks (i.e. Accelerometer and Gyro checks):

INS not calibrated: some or all of the accelerometer' s offsets are zero. The accelerometers need to be calibrated.

Accels not healthy: one of the accelerometers is reporting it is not healthy which could be a hardware issue. This can also occur immediately after a firmware update before the board has been restarted.

Accels inconsistent: the accelerometers are reporting accelerations which are different by at least 1m/s/s. The accelerometers need to be re-calibrated or there is a hardware issue.

Gyros not healthy: one of the gyroscopes is reporting it is unhealthy which is likely a hardware issue. This can also occur immediately after a firmware update before the board has been restarted.

Gyro cal failed: the gyro calibration failed to capture offsets. This is most often caused by the vehicle being moved during the gyro calibration (when red and blue lights are flashing) in which case unplugging the battery and plugging it in again while being careful not to jostle the vehicle will likely resolve the issue. Sensors hardware failures (i.e. spikes) can also cause this failure.

Gyros inconsistent: two gyroscopes are reporting vehicle rotation rates that differ by more than 20deg/sec. This is likely a hardware failure or caused by a bad gyro calibration.

Board Voltage checks:

Check Board Voltage: the board's internal voltage is below 4.3 Volts or above 5.8 Volts.

If powered through a USB cable (i.e. while on the bench) this can be caused by the desktop computer being unable to provide sufficient current to the flight controller - try replacing the USB cable.

If powered from a battery this is a serious problem and the power system (i.e. Power Module, battery, etc) should be carefully checked before flying.

Parameter checks:

Ch7&Ch8 Opt cannot be same: Auxiliary Function Switches are set to the same option which is not permitted because it could lead to confusion.

Check FS_THR_VALUE: the radio failsafe pwm value has been set too close to the throttle channels (i.e. ch3) minimum.

Check ANGLE_MAX: the ANGLE_MAX parameter which controls the vehicle's maximum lean angle has been set below 10 degrees (i.e. 1000) or above 80 degrees (i.e. 8000).

ACRO_BAL_ROLL/PITCH: the ACRO_BAL_ROLL parameter is higher than the Stabilize Roll P and/or ACRO_BAL_PITCH parameter is higher than the Stabilize Pitch P value. This could lead to the pilot being unable to control the lean angle in ACRO mode because the Acro Trainer stabilization would overpower the pilot's input.


5.4 ESC Calibration

CrossRace Pro is compatible with most ESC protocols, such as Dshot, Oneshot, PWM, etc. You can set different ESC protocols in Mission Planner - Mandatory Hardware - ESC Calibration - ESC Type.

Please first ensure that the aircraft is connected properly, the calibration is completed, and can be armed successfully, and then remove the aircraft propellers.

1. Push the throttle channel of the transmitter to the highest position. Power on the aircraft, and when you see LED flashing in multiple colors, disconnect the power.
2. Power on again. Do not move the transmitter until you hear the beeping sound.
3. Push the throttle channel of the transmitter to the lowest position. After hearing the beeping sound, push the throttle slightly. If the motor rotates, the calibration is done. If not, please try the above steps again.

No: No calibration is needed when using digital ESCs with Dshot Protocol.

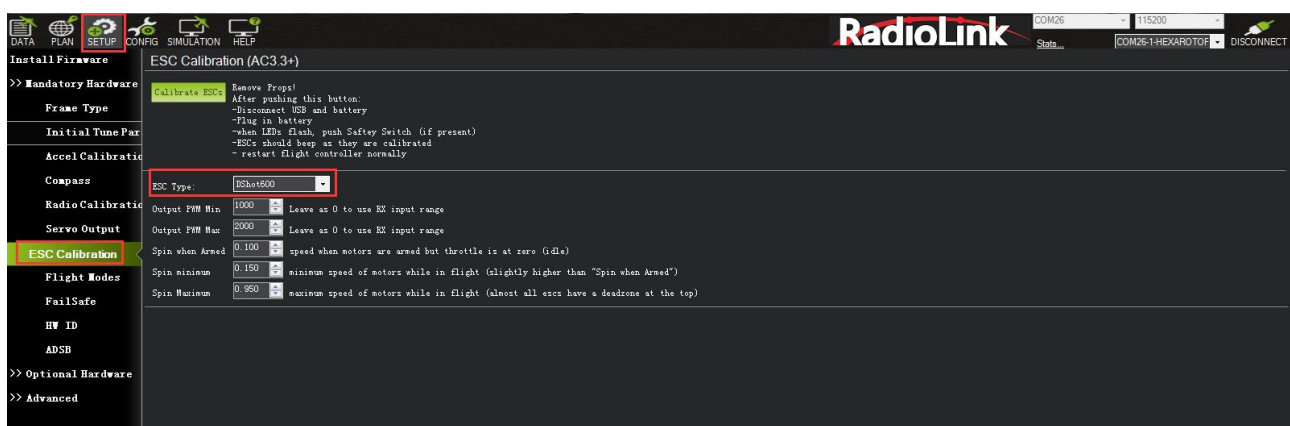


5.5 Level Calibration

If the Mission Planner shows the drone not level when you put it horizontal as this picture, You can setup as below to solve the problem.



Under Initial Setup--Mandatory Hardware--select Accel Calibration from the left-side menu--Click Calibrate Level to start the calibration.

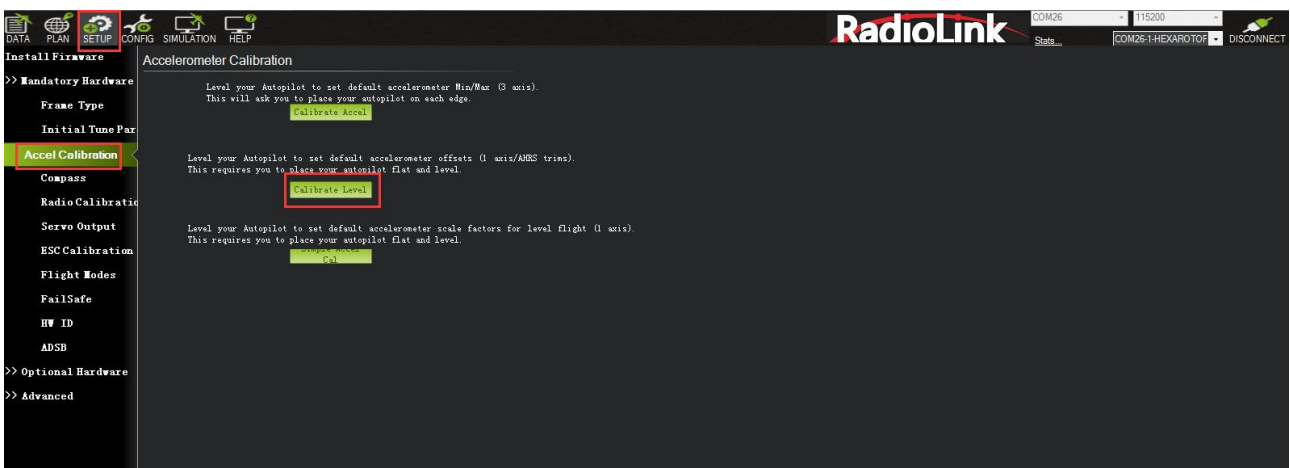


5.6 GeoFence

This is a safety protection mechanism that protects the aircraft from flying out of the range you set. When the function is turned on, it will detect whether the GPS is positioned. If there is no positioning, it cannot be enabled.

The setup steps are as follows:

1. Open Full Parameter List.
2. Search for FENCE_ENABLE, change the parameter to 1, and save Params.

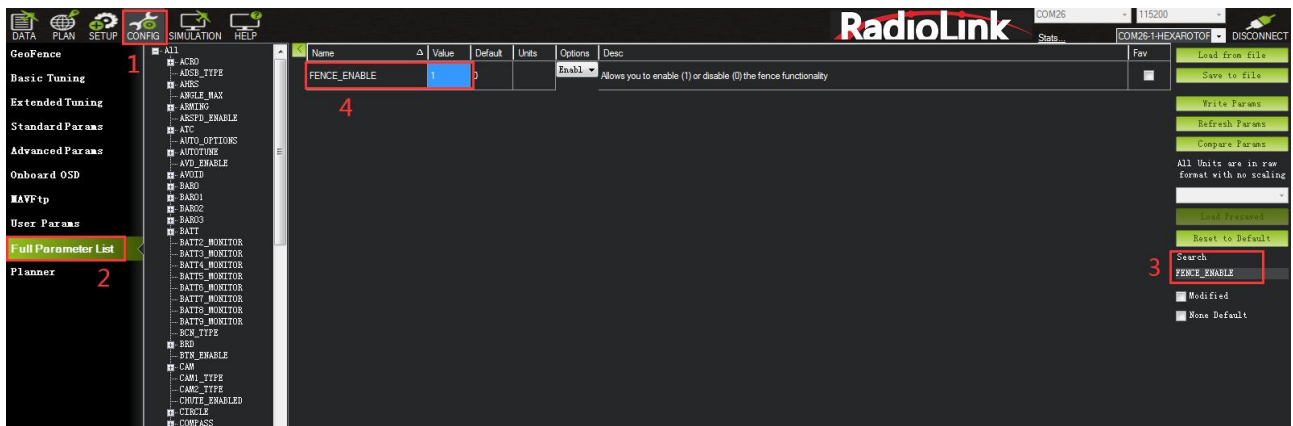


Setting parameters introduction:

When setting GeoFence parameters, please search for the following parameters in Full Parameter List and set them.

FENCE_TYPE (GeoFence type):

- Altitude is the height protection, above which the protection action will be performed.
- Circle is circular protection. Take the take-off point as the center of the circle, set the radius to draw a circle, and perform protection actions beyond this range.
- Altitude and Circle is cylindrical row protection. The take-off point is the center of the circle, set the radius, height, and the surrounding cylinder, and perform protection actions beyond this range.
- Polygon is polygon protection. After drawing the polygon on the map in the flight plan, with the maximum point of 84 points, the protection action will be performed if it exceeds this drawing range.
- Altitude and Polygon is height and polygon protection, which adds altitude protection based on polygon protection.
- Circle and Polygon is circle and polygon protection, which adds circle protection on the basis of polygon, so that the limited range is the green area, and when the green area is exceeded, the protection is performed.

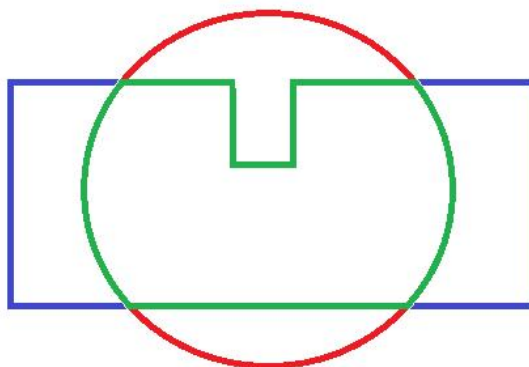


FENCE_ACTION:

All: The above 3 types of protection are involved.

Report Only: When the restricted area is exceeded, only Mission Planner message prompts and no other operations are performed.

RTL or Land: Return or land.

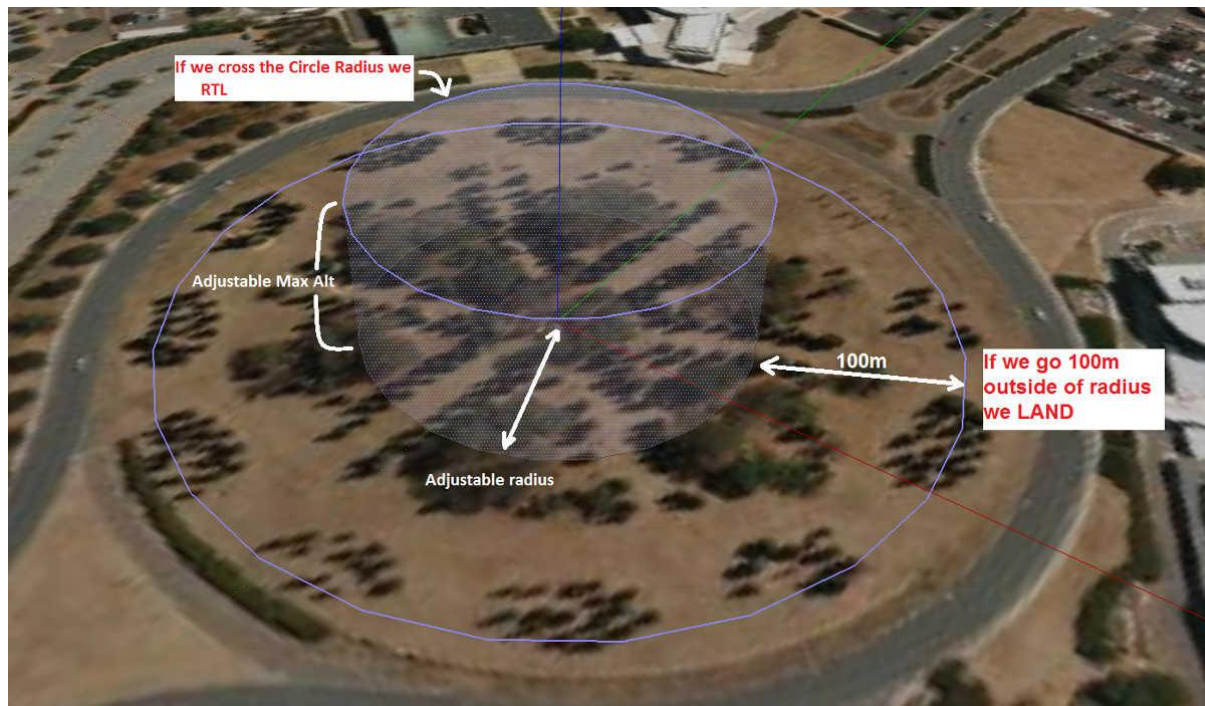

FENCE_ALT_MAX (maximum altitude): protection limit maximum flight altitude (10-1000m)

FENCE_RADIUS (maximum radius): Protection limits maximum flight radius (30-10000m)

FENCE_ALT_MIN (minimum altitude): Protection limit minimum flight altitude (-100-100m)

5.7 Onboard OSD

OSD is the abbreviation of On Screen Display in English. It is a kind of screen display technology, which is used to display characters, graphics and images on the display terminal. The status of the aircraft can be displayed in the returned video, and the data of each module can be integrated into the OSD module, and then the OSD module can return the monitored data to the terminal (FPV glasses or screen) and superimpose it on the video transmission image. CrossRace Pro flight controller integrates an OSD chip. Users do not need to connect an external OSD module. They only need to connect the signal lines corresponding to the image transmission and camera to the OSD port of CrossRace Pro to use the OSD function.

5.7.1 Setting Introduction

OSD Parameters

OSD_W_RESTVOLT: RESTVOLT warn level. Set level at which RESTVOLT item will flash Range is from 0 to 100.

OSD_CELL_COUNT: Battery cell count. Used for average cell voltage display. -1 disables, 0 uses cell count autodetection for well charged LIPO/LIION batteries at connection, other values manually select cell count used.

OSD_CHAN: Screen switch transmitter channel. This sets the channel used to switch different OSD screens. The value includes 0, 5-16.

OSD_SW_METHOD: Screen switch method. This sets the method used to switch different OSD screens.

0 = switch to next screen if channel value was changed.

1 = select screen based on pwm ranges specified for each screen.

2 = switch to next screen after low to high transition and every 1s while channel value is high.

OSD_OPTIONS: OSD Options. This sets options that change the display, including Decimal pack, Inverted Wind, Inverted AH Roll.

OSD_FONT: OSD Font. This sets which OSD font to use. It is an integer from 0 to the number of fonts available.

OSD_V_OFFSET: OSD vertical offset. Sets vertical offset of the osd inside image.

OSD_H_OFFSET: OSD horizontal offset. Sets horizontal offset of the osd inside image.

OSD_W_RSSI: RSSI warn level. Set level at which RSSI item will flash. The range is from 0 to 99.

OSD_W_NSAT: NSAT warn level. Set level at which NSAT item will flash. The range is from 0 to 30.

OSD_W_BATVOLT: BAT_VOLT warn level. Set level at which BAT_VOLT item will flash. The range is from 0 to 100V.

OSD_UNITS: Display Units. Sets the units to use in displaying items.

0 = Metric (meters, kilometers, meters/second, kilometers/hour) .

1 = Imperial (feet, miles, feet/second, miles/hour) .

2 = SI (meters, kilometers, meters/second) .

3 = Aviation (feet, nautical miles, feet per minute, knots).

OSD_MSG_TIME: Message display duration in seconds. Sets message duration seconds.

OSD_ARM_SCR: Arm screen. Screen to be shown on Arm event. Zero to disable the feature.


OSD_DSARM_SCR: Disarm screen. Screen to be shown on disarm event. Zero to disable the feature.

OSD_FS_SCR: Failsafe screen. Screen to be shown on failsafe event. Zero to disable the feature.

OSD_BTN_DELAY: Button delay. Debounce time in ms for stick commanded parameter navigation.


OSD_W_AVGCELLV: AVGCELLV warn level. Set level at which AVGCELLV item will flash.

OSD_TYPE: 1 means the chip of OSD is MAX7456.

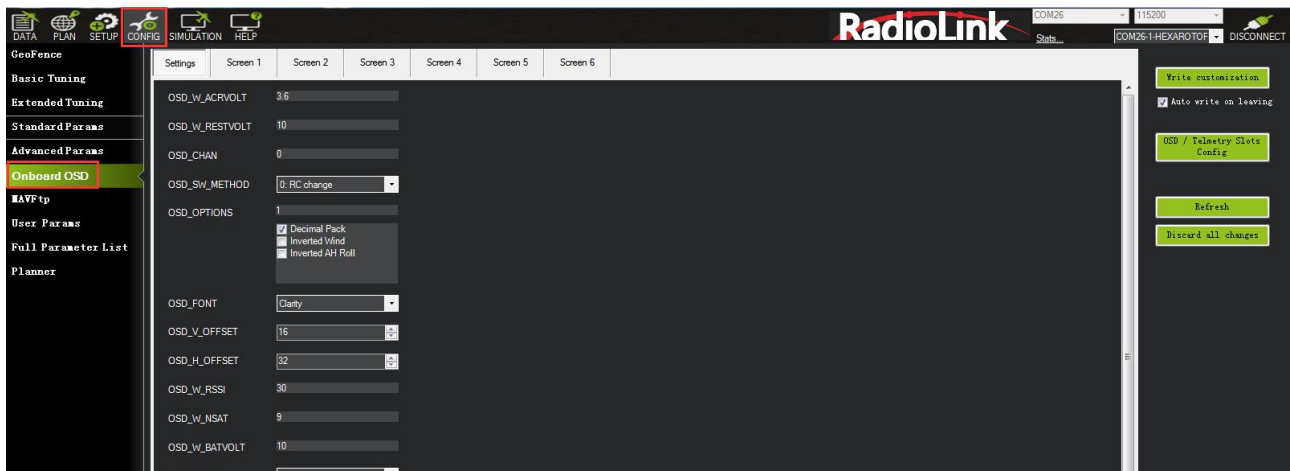

5.7.2 Screen Introduction

The Screen interface is the interface displayed on the user's screen, where the user can independently design the interface layout, display options, etc.

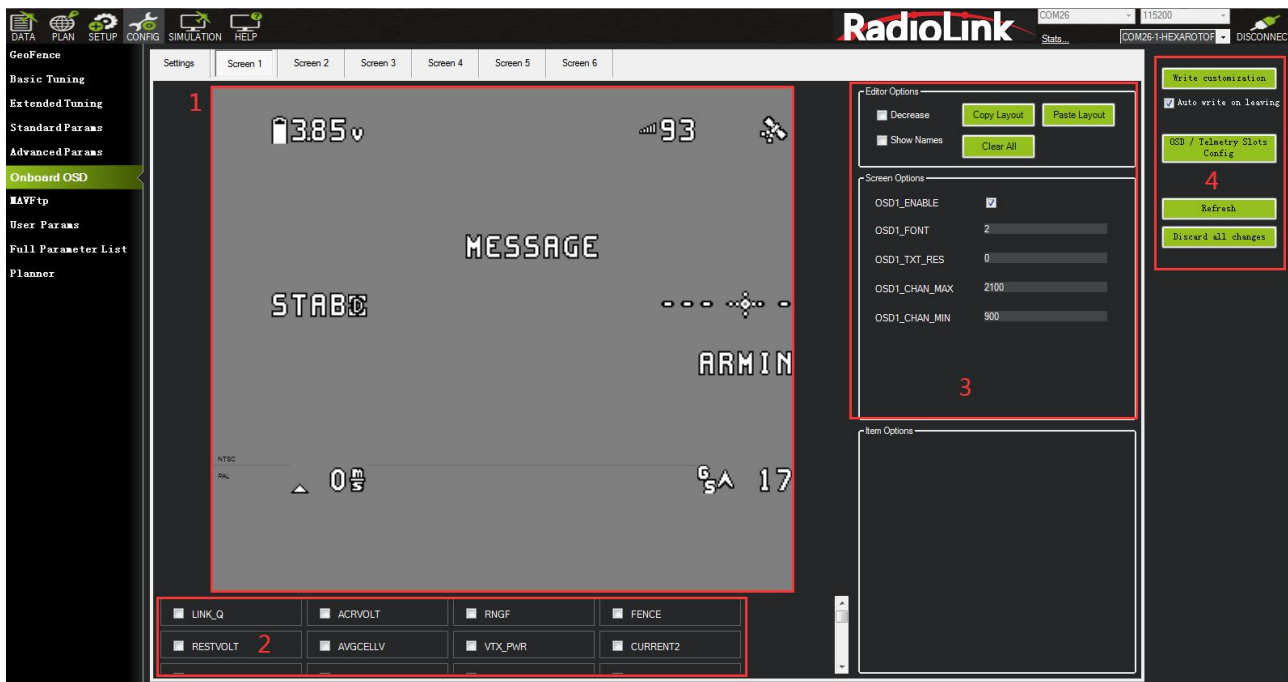

- ① The area is the layout displayed on the screen. Users can freely drag and drop the options inside to customize and adjust the layout of the screen.
- ② The area is the content displayed on the screen. Users can tick the content they need and display it on the screen.
- ③ The area can copy the layout of the current screen or paste the layout of other screens to this screen.
- ④ Write all the current settings in the area.

5.8 Advanced Functions of CrossRace Pro


5.8.1 CrossRace Pro Uses ESC Telemetry

Note: The function requires the ESC to support the ESC telemetry function.

Make sure the TELEM of the ESC is connected to the TELEM of the flight controller ESC interface.

Flight controller settings:

- 1: Search for SERVO_BLH_AUTO in Full Parameter List and change the value to 1.
- 2: Search for SERVO_BLH_MASK in Full Parameter List and check the channel corresponding to the ESC (If the ESC is plugged into channel 1 2 3 4, check channel 1 2 3 4.).
- 3: Search for SERVO_DSHOT_ESC in Full Parameter List and change the value to 1.
- 4: Search for MOT_PWM_TYPE in Full Parameter List and modify the value to the corresponding ESC protocol.
- 5: Restart flight controller.

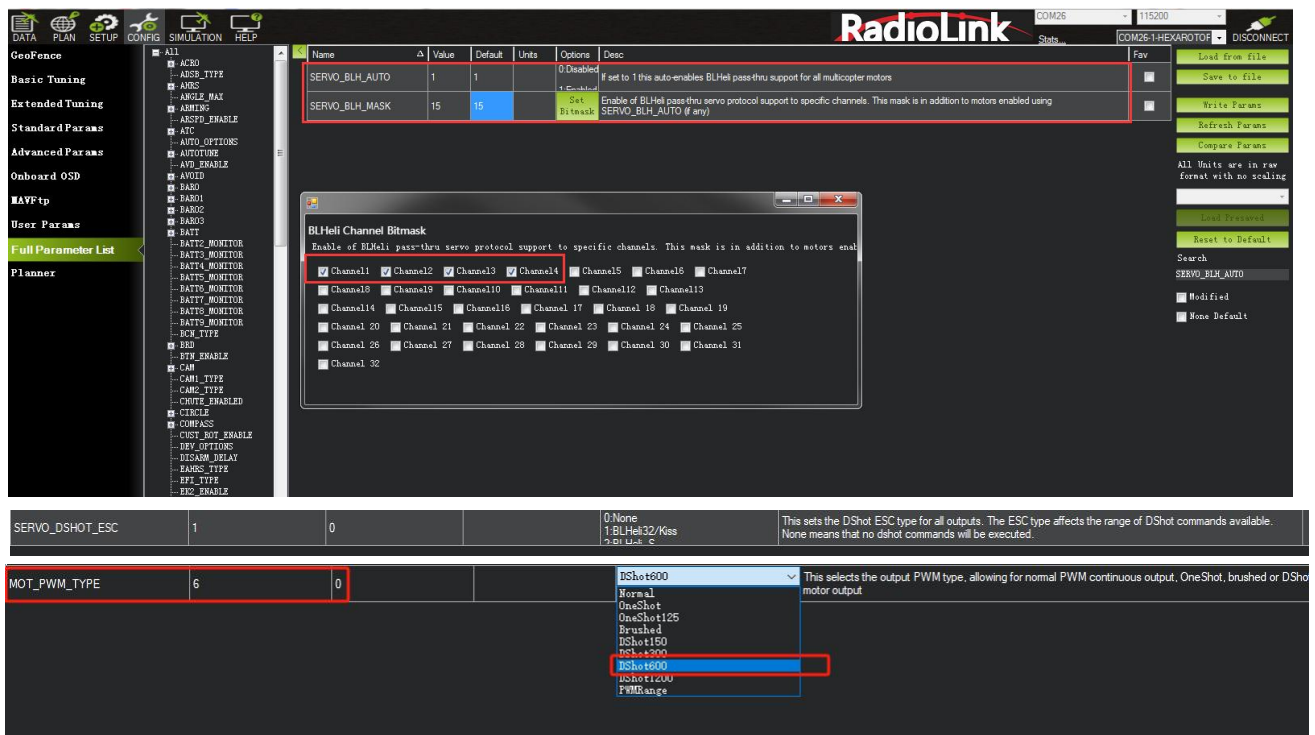


ESC settings:

After successfully configuring the flight controller, open BLHeliSuite32.exe (Please refer to the ESC manual to download the ESC parameter adjustment software).

- 1: Select BLHeli32 Bootloader (Betaflight/Cleanflight) in Select BLHeli_32 Interface.
- 2: Select the corresponding flight controller port and connect.
- 3: Click Read Setup to read the ESC information.
- 4: Enable Auto Telemetry of each ESC.
- 5: Power off and restart. You can see the telemetry information of the ESC in the status bar in Mission Planner.


Note: If you want to set up the ESC, you need to use a separate battery to supply power to the ESC.

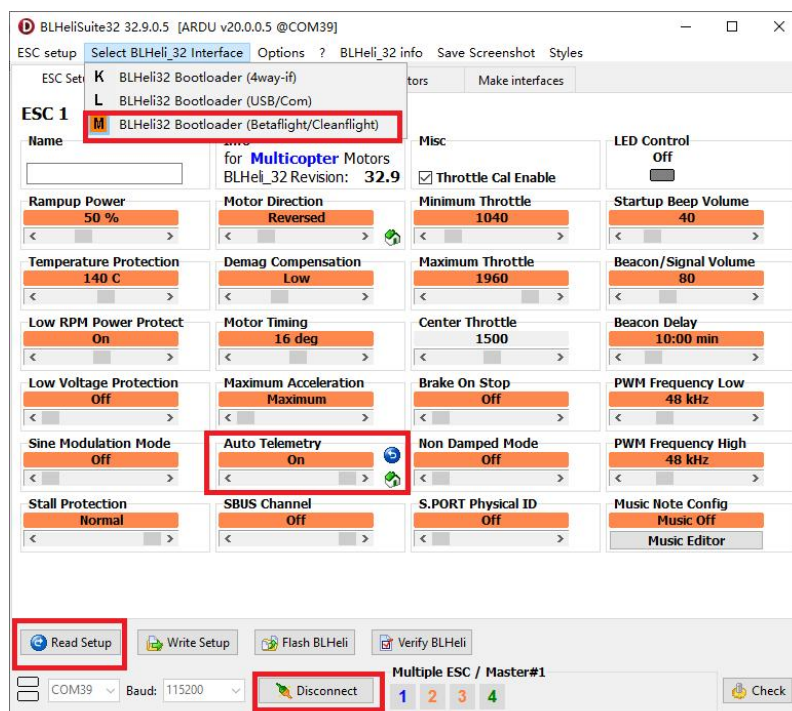

5.8.2 CrossRace Pro's Anti-turtle Mode

CrossRace Pro's anti-turtle mode only takes effect when the ESC protocol is Dshot.

Setting method: Config--Extended tuning--Set Channel opt to Turtle Mode--Write the parameters and restart the flight controller. Anti-turtle mode is enabled when this channel value is high.

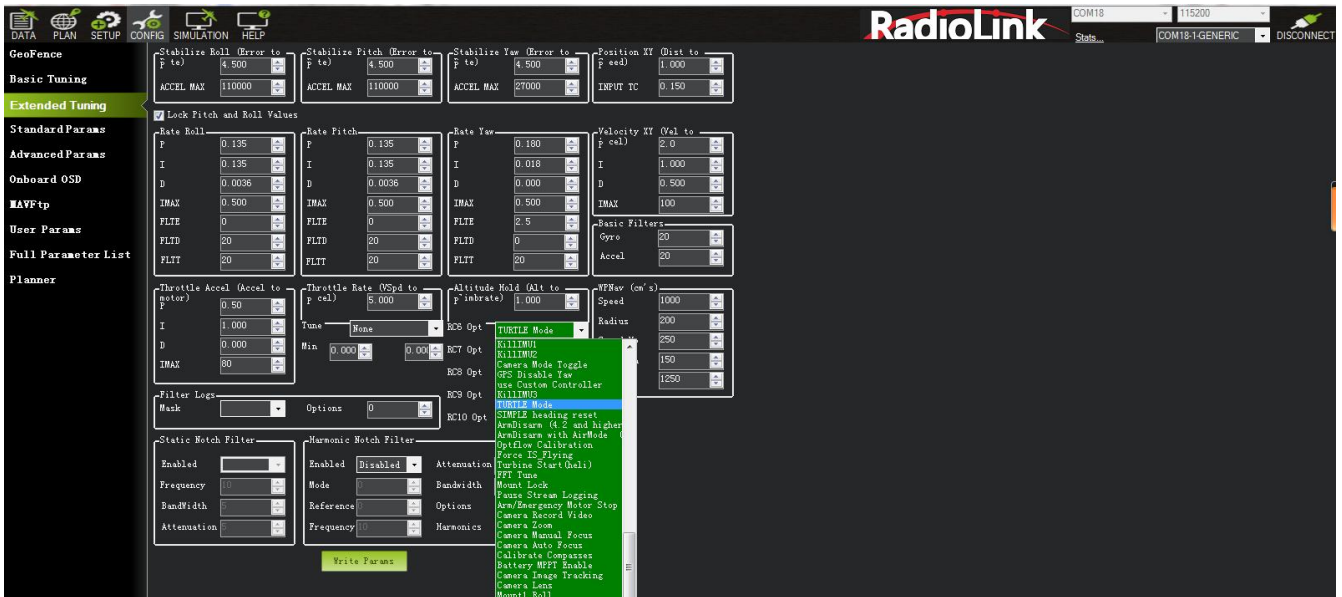


6. AutoTune

AutoTune attempts to automatically tune the Stabilize P, Rate P and D, and maximum rotational accelerations to provide the highest response without significant overshoot. Copter needs to be “basically” flyable in AltHold mode before attempting to use AutoTune as the feature needs to be able to “twitch” the copter in the roll and pitch axis.

Position Hold during AutoTune is available in Copter 3.5 (and higher).

Setup before flying

1. Set up one flight mode switch position to be AltHold.
2. Set an Auxiliary Function Switch to allow you to turn the auto tuning on/off with the a switch.
3. Remove the camera gimbal or any other parts of the frame that could wobble in flight.
4. Select which combination of axis (roll, pitch, yaw) you wish to tune using the AUTOTUNE_AXES parameter.
5. Set the autotune's aggressiveness using the AUTOTUNE_AGGR parameter (0.1=aggressive, 0.075=medium, 0.050=weak), normally start with the default 0.1.
6. For large copters (with props at least 13inch or 33cm diameter) set the Rate Roll and Pitch filters to 10hz (in Copter-3.3 these are RATE_RLL_FILT_HZ and RATE_PIT_FILT_HZ, in Copter-3.4 they are ATC_RAT_RLL_FILT, ATC_RAT_PIT_FILT).
7. It is recommended to enable battery voltage scaling of PID gains.

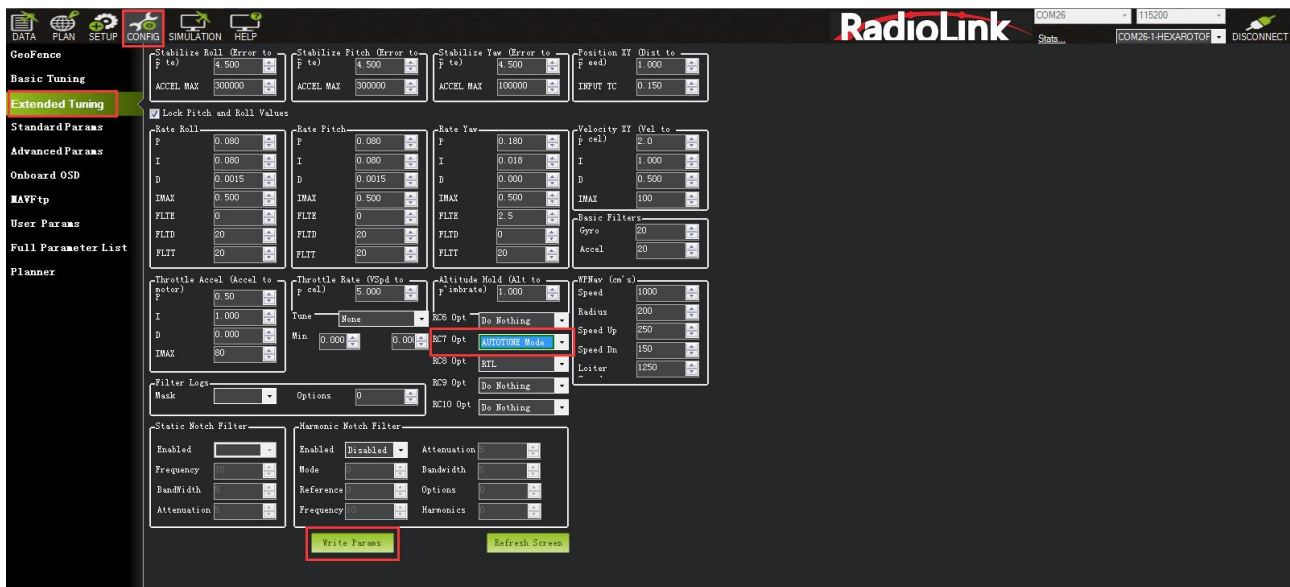

How to invoke AutoTune?

1. Wait for a calm day and go to a large open area.
2. Ensure the ch7 or ch8 switch is in the LOW position.
3. Take off and put the copter into AltHold mode at a comfortable altitude.
4. Face the vehicle so that it will twitch at 90degrees from the direction the wind is blowing (i.e. if tuning Roll first, point the vehicle into the wind).
5. Set the ch7/ch8 switch to the HIGH position to engage auto tuning:
 - (1) You will see it twitch about 20 degrees left and right for a few minutes, then it will repeat forward and back.
 - (2) Use the roll and pitch stick at any time to reposition the copter if it drifts away (it will use the original PID gains during repositioning and between tests). When you release the sticks, it will continue auto tuning where it left off.
 - (3) Move the ch7/ch8 switch into the LOW position at any time to abandon the autotuning and return to the origin PIDs.
 - (4) Make sure that you do not have any trim set on your transmitter or the autotune may not get the signal that the sticks are centered.
6. When the tune completes the copter will change back to the original PID gains.
7. Put the ch7/ch8 switch into the LOW position then back to the HIGH position to test the tuned PID gains.
8. Put the ch7/ch8 switch into the LOW position to fly using the original PID gains.
9. If you are happy with the autotuned PID gains, leave the ch7/ch8 switch in the HIGH position, land and disarm to save the PIDs permanently.

If you DO NOT like the new PIDS, switch ch7/ch8 LOW to return to the original PIDs. The gains will not be saved when you disarm.


If you find after performing an AutoTune that the vehicle feels overly twitchy when flying Stabilize, AltHold or PosHold (but ok in more autonomous modes like Loiter, RTL, Auto) try reducing the RC_FEEL parameter to 0.25. This smooths out the pilot's input. Alternatively try reducing the AUTOTUNE_AGGR parameter (it should always be in the range 0.05 to 0.10) and try again.

If the vehicle feels sloppy after the AutoTune, try increasing the AUTOTUNE_AGGR parameter as high as 0.10 and attempt the autotune again.

7. Parameter Setting

7.1 Parameter Interface Introduction

All of the parameters of CrossRace Pro can setup in Mission Planner, please do not change the parameters during the flight.

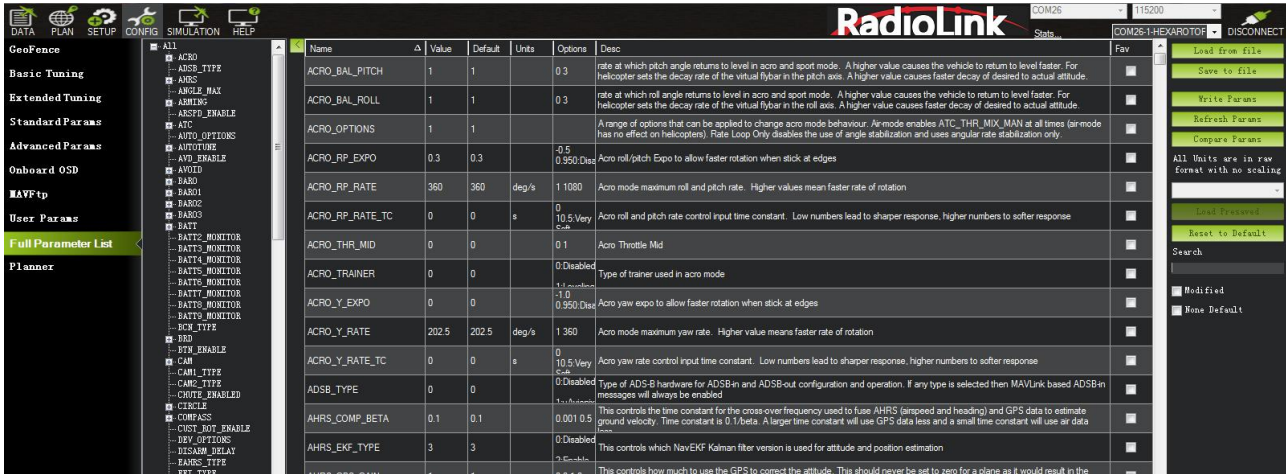

Parameters on the left:

GeoFence: Refer to [Chapter 5.6 GeoFence](#).

Basic Tuning: Set Roll/Pitch sensitivity.

Extended Tuning: Adjust PID, 7 and 8 channel function.

Standard Params: Provide some basic settings such as logs, additional functions, channel functions, etc.

Advanced Params: Provide some advanced function settings such as PID.

Onboard OSD: Refer to [Chapter 5.7 Onboard OSD](#).

MAVFtp: In firmware versions 4.1 and above, integrated FTP (File Transfer Protocol) is implemented, allowing access to the SD card (if there is one) and the internal flash file system through this interface. (It is not recommended to use this system to download logs. Please refer to Chapter 8 to download the log, which is faster).

User Params: Quickly set the functions of the auxiliary channel of the transmitter.

All parameter trees: Related function parameters are displayed closely. After a function is expanded, the function-related parameters are displayed.

Planner: Related settings of Mission Planner.

Parameters on the right:

Load from file: load the files with the parameters have setup already.

Save to file: save the file with the parameters to your computer.

Write Params: write the parameters that have modified to CrossRace Pro.

Refresh Params: exhibit the newest parameters which have modified no the Mission Planner.

Compare Params: compare the current and the previous parameters.

Load Presaved: load the parameters that Radiolink upgrade the files which design for 210-250 frame racing drone to CrossRace Pro.

Reset to default: reset all the parameters to default files. Please recalibrate and re-setup all the parameters after reset.

Search: write down the name of parameters you want to setup, much same as the keyboard shortcuts function.

7.2 Parameter Adjustment

All settings of the flight controller can be set or adjusted. You can enter Full Parameter List to search the parameter you want to modify and then modify it. After the modification, please remember to click Write Params on the right.



7.3 Manual Parameter Adjustment

The default parameters of the flight controller may not be applicable for your aircraft and require further manual adjustment. The manual adjustment document is provided below. You can make further fine adjustments according to it. I hope everyone will fly perfectly.

[PID Parameter Adjustment Setup Tutorial](#)

7.4 Optimize the Handling of Acro Mode

ACRO MODE is one of the most important flight modes for multi-copters. CrossRace Pro is specifically optimized for ACRO MODE. All parameter optimization in this chapter is based on a suitable PID. Please adjust the aircraft's PID to an appropriate value before performing the following debugging.

Search ACRO_OPTION in Full Parameter List and change the parameter to 1 to turn on air mode (CrossRace Pro has the air mode setting of ACRO_OPTION turned on by default). If there is no air mode, the motor will only remain idle or stop completely when your throttle reaches 0, and the attitude will no longer be controlled at this time. When the air mode is enabled, the flight controller will still keep the PID active even if the throttle stick is in the position of 0. At this time, the aircraft's attitude will still be controlled, and the attitude can be locked during rapid descent or stunts. It is recommended to turn this parameter on.

Search ATC_THR_G_BOOST in Full Parameter List. This parameter is similar to BetaFlight's anti-gravity parameter. It can effectively suppress the problem of the aircraft raising its head when the throttle is pushed hard. If this value is too high, it will cause the aircraft to shake. Please adjust it according to your own aircraft. The adjustment range is 0-1.

Search ACRO_THR_MID in Full Parameter List. This parameter can change the ACRO MODE throttle to a linear throttle. Since the throttle curve of all modes of CrossRace Pro is non-linear by default, this allows the throttle position of the aircraft to take off roughly at the mid-throttle position. In ACRO MODE, this setting may make some pilots unable to adapt and cause problems with throttle control. Pilots can change this parameter to 1 according to their own conditions, and the ACRO MODE throttle will be changed to a linear throttle. The throttle curves of other modes will not be changed by this parameter.

adjustment. Modifying this parameter may cause some security issues! If you need to change this parameter, please check the description and warning of this parameter in Chapter 3.7.2.


8. Download DataFlash Log

There are two ways to record your flight data. With some exceptions, the two methods record very similar data but in different ways:

Dataflash logs use the CrossRace Pro onboard dataflash memory, which you can download after the flight. On Copter dataflash logs are created after you first arm the copter.

Telemetry logs (also known as “tlogs”) are recorded by the Mission Planner (or other ground station) when you connect ArduPilot to your computer via a telemetry link.

If you are not yet familiar with the basics of these log files, first review the introductory pages to understand where these logs are stored and how you can download and view the information held within them.

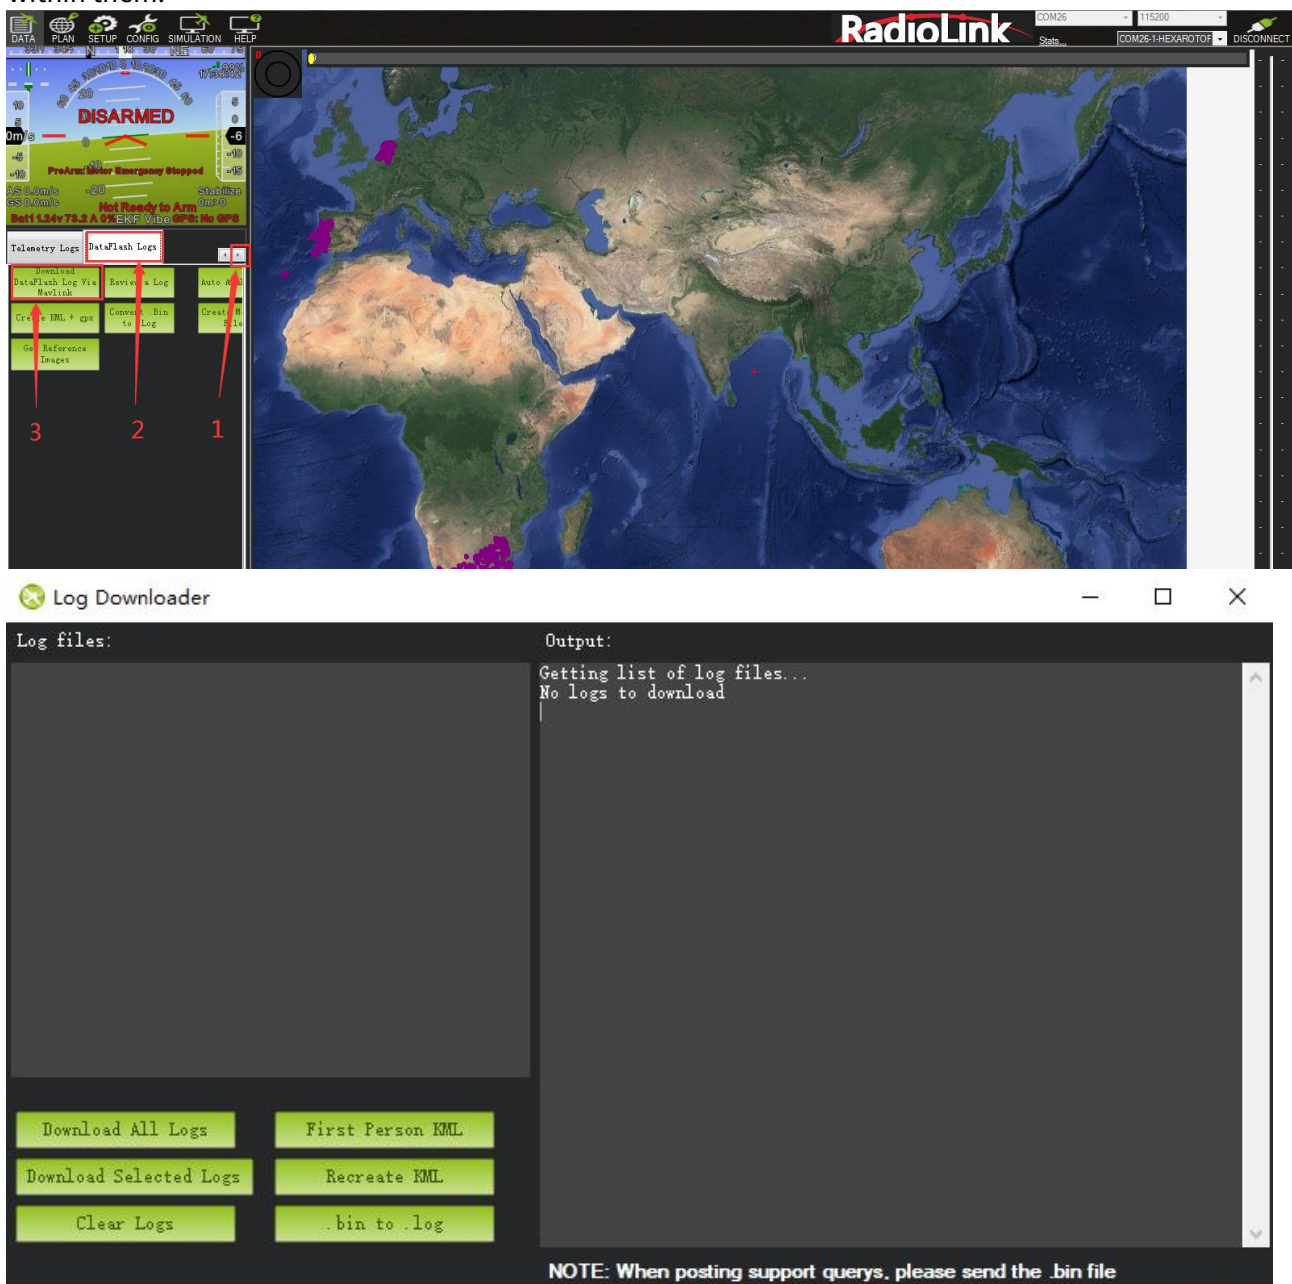

Note: Because the download thread will block the main thread of the flight controller when downloading the log, an internal error will be reported after downloading the log. Please restart the flight controller before the next flight.

Open the log file through the steps below:



Files available for reference:

<http://ardupilot.org/copter/index.html>